


9800 HEAD ASSEMBLY INSTRUCTIONS TO CHANGE HANDING

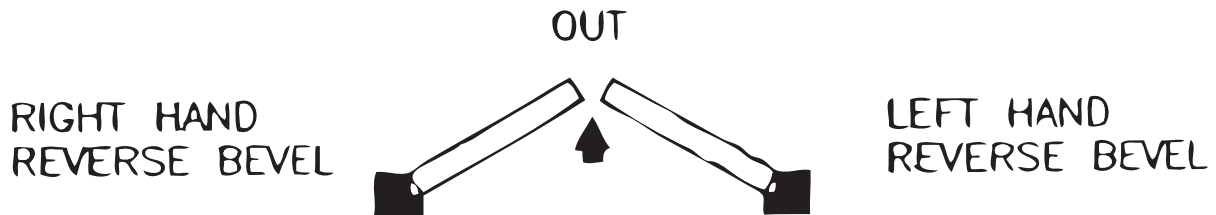

- TO CHANGE HAND OF #F9860V EXIT DEVICE.
- 1. REMOVE CHASSIS PINS AND MAIN SLIDE.
- 2. REMOVE LIFT LEVER PIN AND LIFT LEVER.
- 3. REASSEMBLE LIFT LEVER AT OPPOSITE SIDE, AS SHOWN.
- 4. REPLACE MAIN SLIDE AND CHASSIS PINS.

