


INSTALLATION INSTRUCTIONS for ELECDDV180 Electronic Digital Door Viewer 180° :

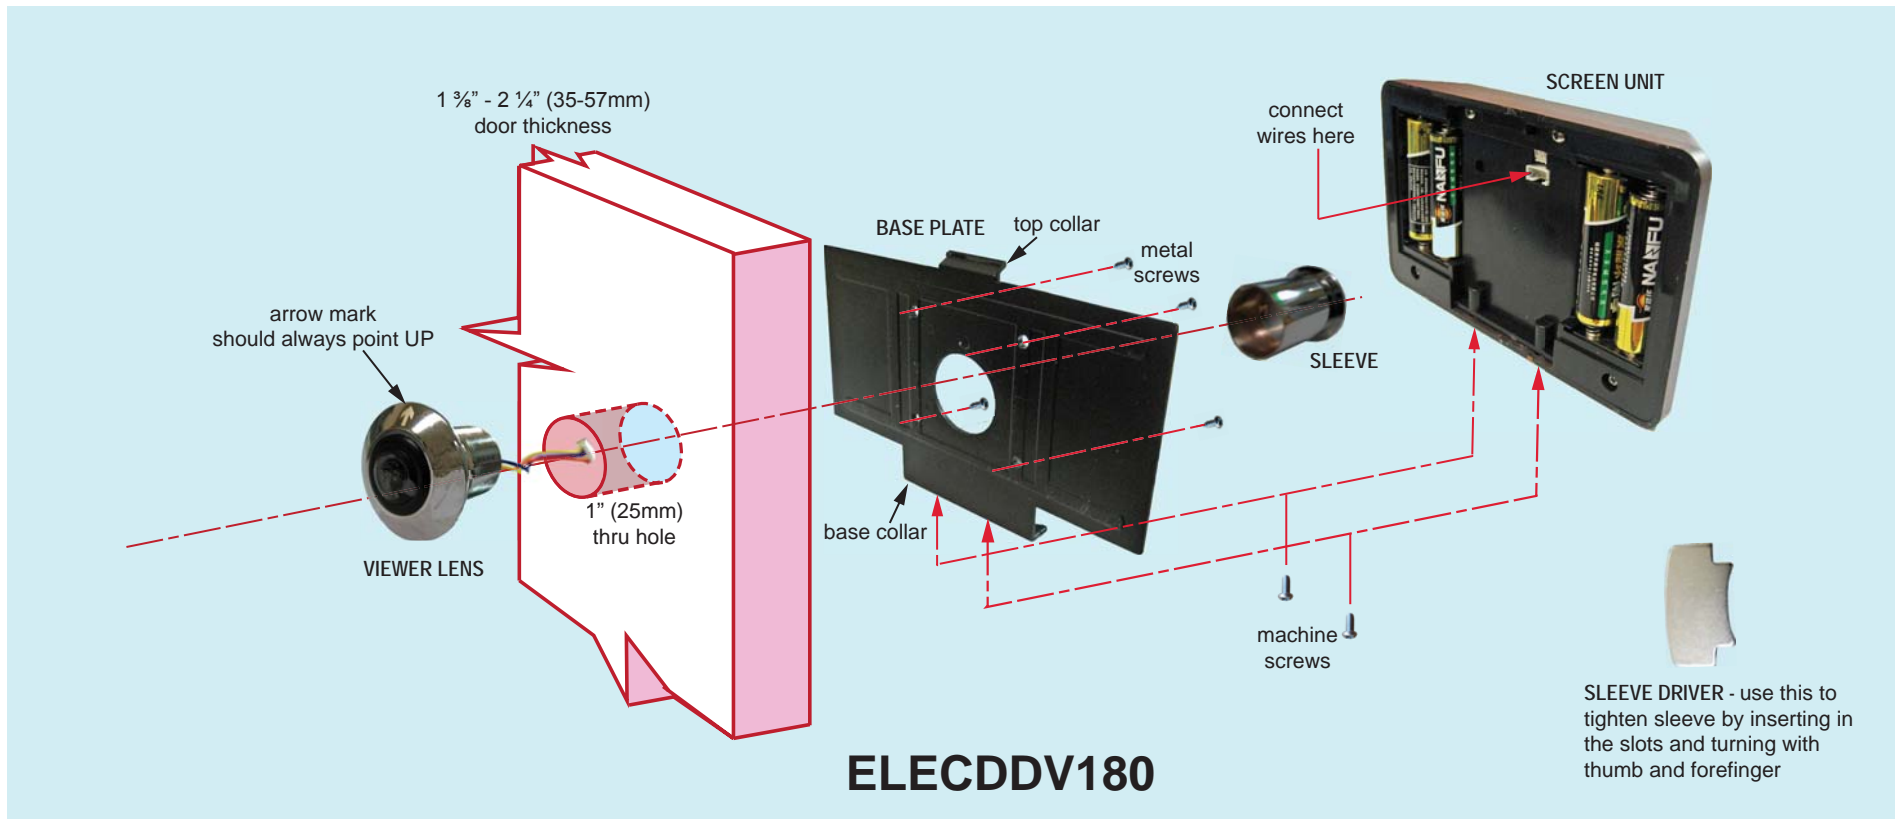

1. Drill a 1" (25mm) thru hole on the door
2. Insert viewer lens from the outside, making sure the wires come out through the other side
3. Mount base plate inside the door by aligning the 1" thru holes and securing it on the door with four (4) metal screws
4. Screw on the sleeve to the lens making sure the arrow mark on the lens is pointing up before tightening sleeve with the sleeve driver
5. Install batteries at the back of the screen unit and connect the wires from the lens onto the screen unit
6. Mount the screen unit by inserting the top and base collars into the slots at the back of the screen unit
7. Test unit by pressing the power button located on the front of the screen unit
8. If image appears right side up secure screen unit by screwing bottom of unit with two (2) machine screws onto the base plate, otherwise adjust lens until arrow marking on the lens is pointing UP and repeat step 7



TROUBLESHOOTING GUIDE

SYMPTOM	CAUSE	SOLUTION
1. Image is upside down or at an angle.	Camera is not positioned correctly	Loosen viewer lens and rotate until arrow marking is pointing UP
2. Flashing / Flickering image	Battery power is low	Replace batteries