


Surface Mounted
Adjustable & Preset "Back-Check"
300 Series
Non Hold-Open
Optional BF/DA

Installation Instructions for REGULAR ARM(PULL SIDE) Mounting

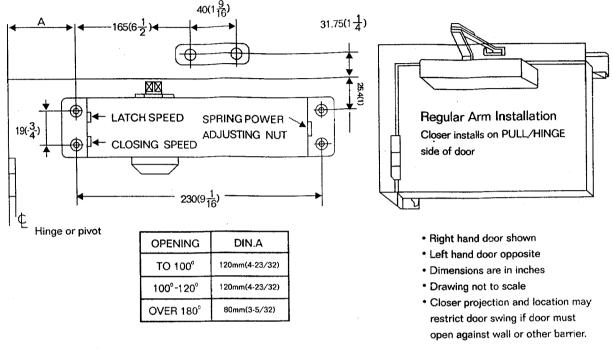

INSTALLATION INSTRUCTIONS

- 1.Select degree of opening from table and use template dimensions shown in above.mark 4 holes on door for door closer and two (2) holes on frame for arm shoe.
- 2.Drill pilot holes in door and frame for #14 all-purpose screws or drill and tap for 1/4-20 machine screws.
- 3.Install adjustable forearm/arm shoe assembly to frame using screws provided.
- 4.Install main arm to top pinion shaft using screw provided.
- 5.Mount closer on door using screws provided, SPRING POWER ADJUSTING NUT MUST BE POSITIONED AWAY FROM HINGE EDGE.
- 6.Adjust length of adjustable forearm so that adjustable foream is perpendicular to frame when assembled to preloaded main arm (Illustration below). Secure forearm to main arm with screw provided.
- 7.Snap pinion cap over shaft at bottom of closer, (When using full cover, pinion cap is not necessary).
- 8.Adjust closing speed,back check control and spring power of door,following instructions as shown page 4.

Top View Typical Installation

