500 SERIES ACCESSORIES



OPTIONAL INSTALLATION

| REGULAR ARM (PULL SIDE) | MAXIMUM OPENING: 180° (Standard), 120° (Hold Open) OPTIONAL INSTALLATION ARMS: 501 / 502- Hold-Open Arm with Parallel Bracket, Non-Handed with Stop in Soffit Shoe BRACKETS: 704 - Flat Drop Bracket |
|-----------------------------|---|
| TOP JAMB (PUSH SIDE) | |
| PARALLEL ARM (PUSH SIDE) | MAXIMUM OPENING: 180° (Standard), 120° (Hold Open) OPTIONAL INSTALLATION ARMS: 501 / 502 - Hold-Open Arm & Parallel Bracket, Non-Handed with Stop in Soffit Shoe BRACKETS • 704 - Flat Drop Plate • 904 - Parallel Arm Drop Bracket for Non-Hold Open Parallel Arm Applications to Clear a Surface-Applied Stop / Holder • 505 - Parallel Arm Bracket |



