


INSTALLATION INSTRUCTION 45-RIM / F45-RIM / 45-SVR / F45-SVR EXIT DEVICE



It may be the case that the panic fitting cannot be installed on extreme door situations according tostandard measurements

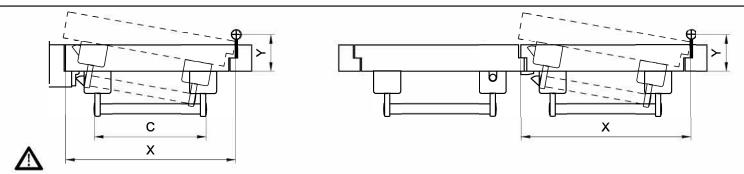