
 



INSTRUCTIONS FOR **CAL-ROYAL** NESC TRIM FOR 9800 SERIES EXIT DEVICE

NESC-9830

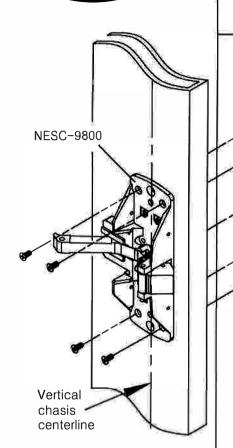




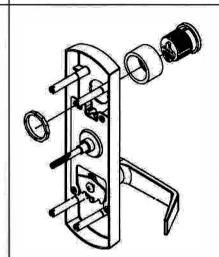

NESC-9840

Pull when
Push bar locked down
Dummy Nesc Lever
Trim

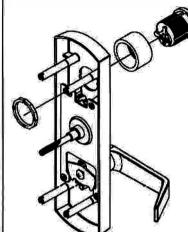

NESC-9805

Key unlock
Nesc Lever,
Key remained
on Cyl unless
Locked. Cyl
Nesc Lever Trim

13 function Entrance

ockable Nesc

Lever Trim

Key locks &

Unlocks Lever

NESC-9800

Attach the collar and mortise cyl to the nesc case with mortise nut, attach case to door thrubolting (4) screws to the chasis, aligning spindle to hub

15 function Passage

Attach nesc case to door thrubolting the (4) screws to the chasis, allaning spindle to hub of the Chasis

10 function Dummy

Attach the collar and dummy cyl to the nesc case with mortise nut, attach case to door thrubolting (4) screws to the chasis,


04 function Storeroom

Attach the collar and mortise cyl to the nesc case with mortise nut, attach case to door thrubolting (4) screws to the chasis, aligning sprindle to hub




CAL-ROYAL NESC Lever Trim For 9800 Series Method of Changing Hand of Lever LHR(Reverse Step for RHR)


1.Rotate lever to LHR positioned at 90°

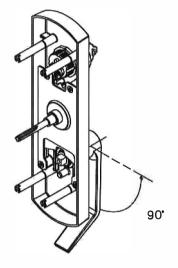


2.Place and fasten cam piece with locked type washer and screw

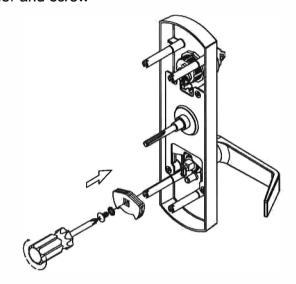


 3.Done

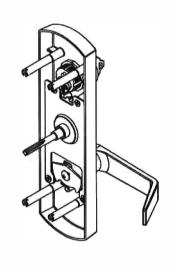




1.Rotate lever to RHR positioned at 90°

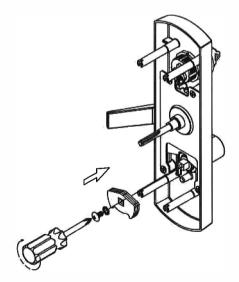

2.Place and fasten cam piece with locked type washer and screw

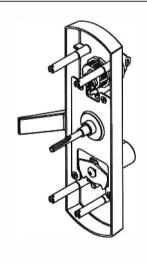

3.Done

DRWG.# EDG-4157-09/24-2 of 2