

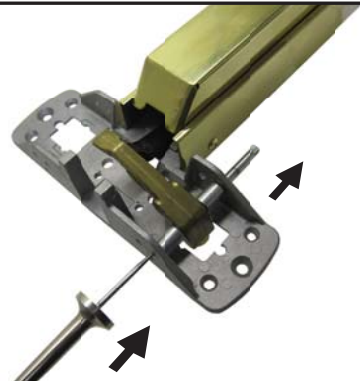
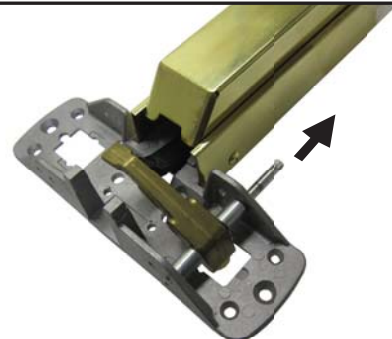
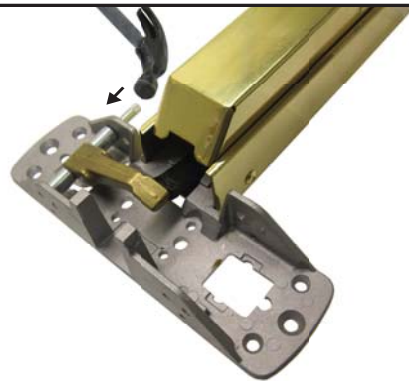



INSTRUCTIONS ON HOW TO REVERSE HANDING

FROM LHR (Left Hand Reverse) to RHR (Right Hand Reverse)




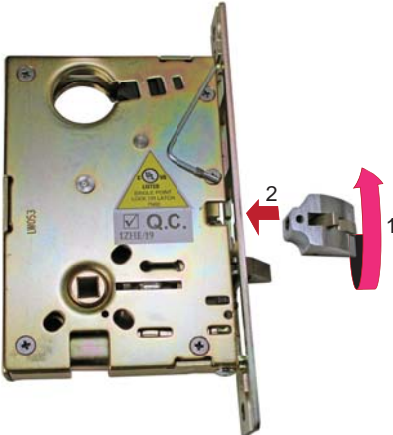

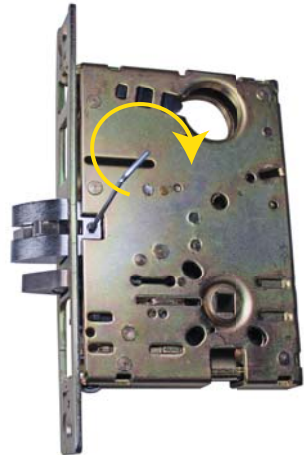
Applicable for **MR9800 and 9800 Series Rim Exit Devices**

<p>1</p>  <p>Remove cover.</p>	<p>2</p>  <p>Use a puncher tool or any hard metal with a diameter smaller than the pin.</p>
<p>3</p>  <p>Punch pin out by slowly hammering the puncher tool.</p>	<p>4</p>  <p>Take out pin, lift arm and the two metal bushings.</p>
<p>5</p>  <p>Assemble parts on the opposite side of the head as shown. Punch pin back to place.</p>	<p>6</p>  <p>Check lift arm, it should move freely.</p>

INSTRUCTIONS ON HOW TO REVERSE HANDING FROM RHR (Right Hand Reverse) to LHR (Left Hand Reverse)

Applicable for MR9800 LOCK CASE



<p>1</p>  <p>Peel off sticker</p>	<p>2</p>  <p>Remove Latch Lock Screw with the supplied allen wrench</p>	<p>3</p>  <p>Slowly pull out latch</p>
<p>4</p>  <p>Reverse the latch then slowly put back in place.</p>	<p>5</p>  <p>Turn the Lock Case over.</p>	<p>6</p>  <p>Align the latch screw hole then tighten the screw.</p>