


INSTRUCTIONS FOR INSTALLATION OF NEW LOCKSETS (WOOD DOORS)

FOLLOW INSTRUCTIONS BELOW FOR INSTALLATION OF ENTRANCE, PASSAGE AND BEDROOM/BATHROOM LOCKSETS

HAR/BRV

1. MARK DOOR


MARK FOR 25mm (1") DIA. HOLE IN DOOR EDGE

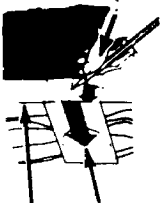

MARK FOR 54mm (2-1/8") DIA. HOLE IN DOOR FACE

(IF APPLICABLE)

Cut out the template and fold it along the dotted line. Hold it against high side of door bevel with center line about 914mm (36") from the floor. Mark center of door edge, and center hole on door face through guide on template.



DOOR
HIGH SIDE OF BEVEL
(IF APPLICABLE)


3. INSTALL LATCH




Insert latch in hole, keeping it parallel to face of door. Mark out line and remove latch.



Insert latch and tighten screws.




Chisel 3mm (1/8") deep or until latch face is flush with door edge.

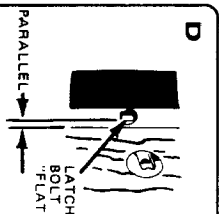

For round face latch installation, insert latch into 25mm (1") dia. hole Keep latchbolt "flat" parallel with face of door. Press latch until it is flush with door edge. No chiseling is required.

2. DRILL HOLES


25mm (1") DIA. HOLE

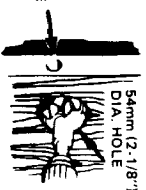

54mm (2-1/8") DIA. HOLE


Drill 54mm (2-1/8") dia. hole through door face as marked for lockset. It is recommended that holes be drilled from both sides to prevent splitting. Drill 25mm (1") dia. hole in center of door edge for latch.

4. INSTALL STRIKE

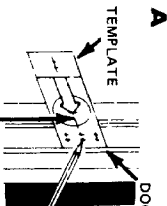


DOOR STOP

LOCATE SAWE DISTANCE FROM CENTER OF LATCH BOLT

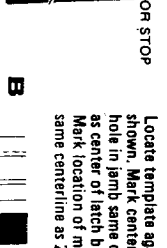

CENTER OF 25mm (1") DIA. HOLE MARKED IN STEP "A"

Locate template against door stop as shown. Mark center for 25mm (1") dia. hole in jamb same distance from floor as center of latch bolt located in step 1. Mark location of mounting screws on same centerline as 25mm (1") dia. hole.

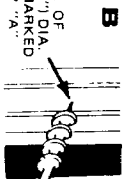


Drill 25mm (1") dia. hole 16mm (5/8") deep into door jamb.



Align mounting holes in strike with marks on door jamb. Outline outside edges of strike. Chisel 2mm (1/16") deep or until strike is flush with jamb. (Adjustable tang on strike may be bent in or out to eliminate loose fit between door and door stop.)

5. INSTALL EXTERIOR AND INTERIOR KNOBS

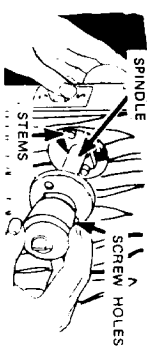

Insert knob with spindle into latch, making certain that stems are positioned correctly through latch holes. Press flush against door. For easier insertion of spindle, depress latch bolt.

Install interior knob assembly by placing on spindle and aligning screw holes with stems. Push flush against door. Insert screws and tighten until lockset is firm.