


# INSTRUCTIONS FOR INSTALLATION OF SERIES DEADLOCKS


For use on doors 35mm (1-3/8") to 44mm (1-3/4") — For thicker doors to 57mm (2-1/4") see reverse side.

SD200

## 1 MARK DOOR

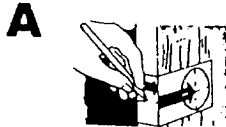


Fold and apply template to high edge of door bevel and mark center of door edge as indicated on template at the desired height from the door.

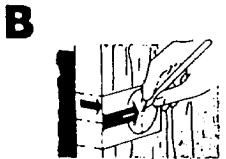


Mark center hole on door face through guide on template. For either 60mm (2-3/8"), 70mm (2-3/4") or 127mm (5") backset.

## 2 DRILL HOLES

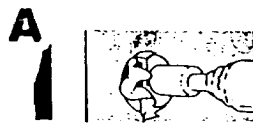


Drill thru door face as marked for lockset. It is recommended that holes be drilled from both sides to prevent splitting. Hole size is 54mm (2-1/8") for standard installations.

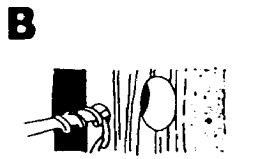


Drill 25mm (1") hole in center of door edge thru to 54mm (2-1/8") hole for latch.


## 3 INSTALL LATCH

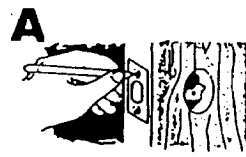

Insert latch in hole, keeping it parallel to face of door. Mark outline and remove latch.

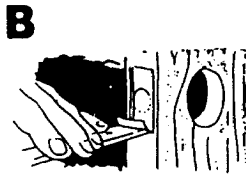

Chisel 3mm (1/8") deep or until latch face is flush with door edge.

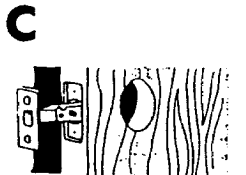


Install deadbolt latch in "up" position into hole as shown on latch. Insert and tighten screws.

**IMPORTANT:** Do not hammer on latch if bolt is extended.




For round face deadbolt press flush to door edge. Bolt must be vertically aligned with door edge as indicated by arrow.

## INSTRUCTIONS FOR ADJUSTING LATCH FROM 2-3/8" (60mm) TO 2-3/4" (70mm) RETRACT LATCH BEFORE ADJUSTING SIZE

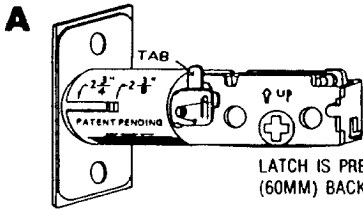


LATCH IS PRE-SET FOR 2-3/8" (60MM) BACKSET.

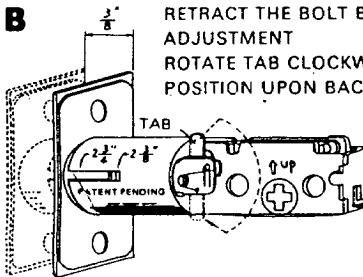

TO ADJUST FOR 2-3/4" OR (70MM) BACKSET  
RETRACT THE BOLT BEFORE BACKSET ADJUSTMENT  
ROTATE TAB CLOCKWISE TO DOWN POSITION UPON BACKSET ADJUSTMENT

## 1 FOLD HERE ON DOOR EDGE


MARK FOR 44mm (1-3/4") or DOOR

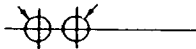

## 3

DRILL 25mm (1") HOLE IN CENTER OF DOOR EDGE

## TEMPLATE FOR INSTALLING

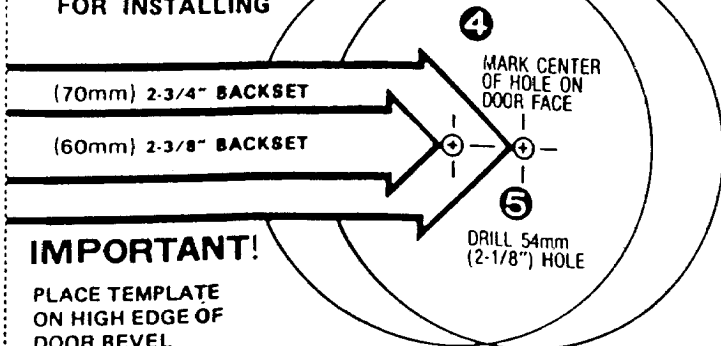

## IMPORTANT!

PLACE TEMPLATE ON HIGH EDGE OF DOOR BEVEL