


# AUTOMATIC FLUSH BOLTS (FOR WOOD DOOR APPLICATION)

DIMENSIONS SHOWN ON THIS TEMPLATE ARE FOR TOP FLUSH BOLTS. FOR BOTTOM BOLTS INVERT AND MEASURE FROM BOTTOM EDGE OF DOOR

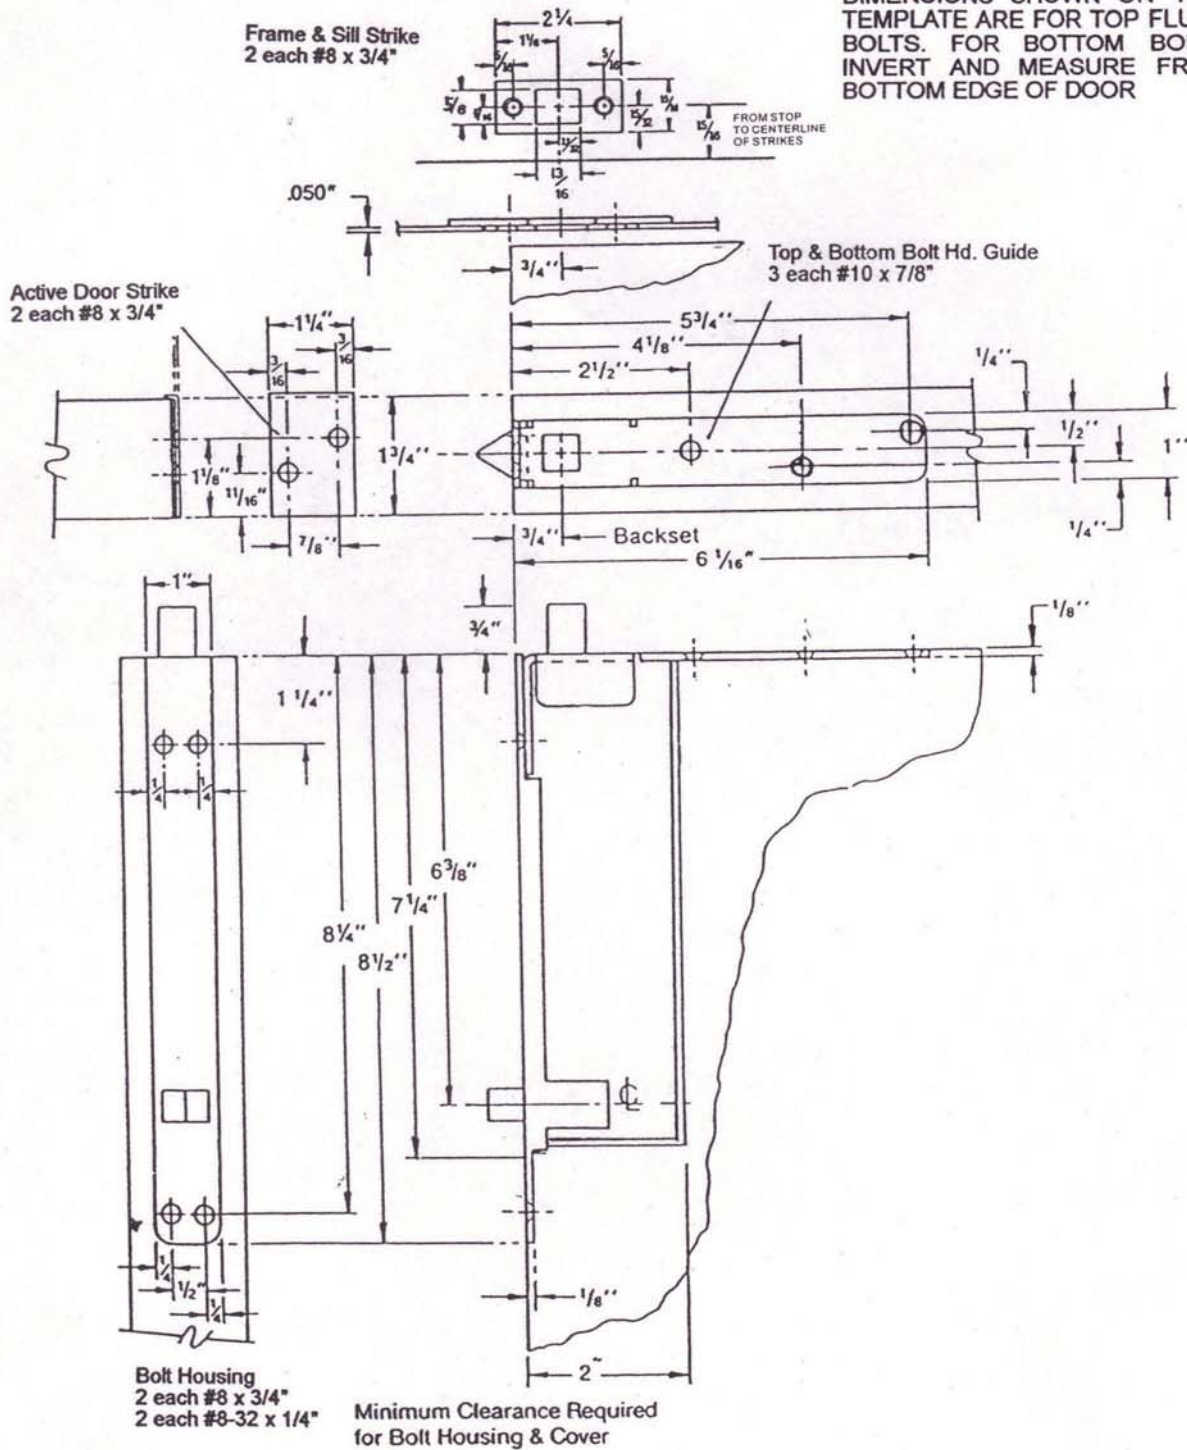

SCREW DETAILS:	
Bolt Housing	: 2 - #8 x 3/4" flat head sheet metal/machine screws 2 - #8-32 x 1/4" flat head sheet metal screws
Frame & Sill Strike	: 2 - #8 x 3/4" flat head sheet metal/machine screws
Bolt Guide	: 3 - #10 x 7/8" flat head machine screws
Active Door Strike	: 2 - #8 x 3/4" flat head sheet metal/machine screws