
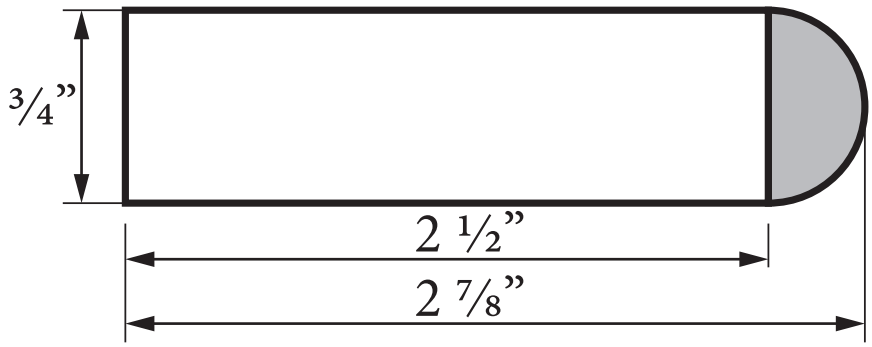


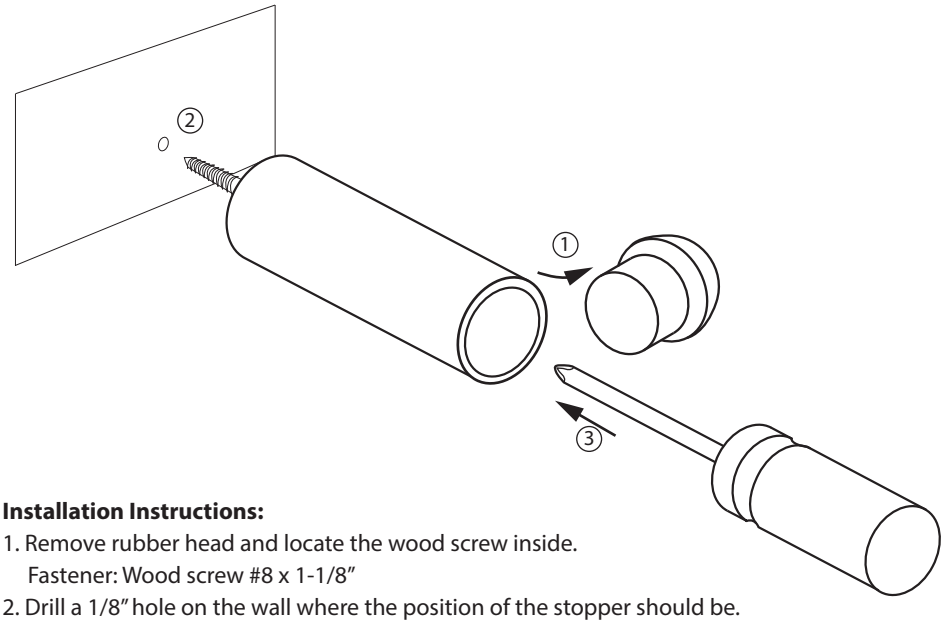

Installation Instructions:

1. Remove rubber head and locate the wood screw inside.
   Fastener: Wood screw #8 x 1-1/8″
2. Drill a 1/8″ hole on the wall where the position of the stopper should be.
   Drill a 1/4″ hole when using the plastic anchor provided if necessary.
3. Screw the stopper to the wall and place the rubber head.

The illustration and technical description in this cut sheet is current as of the date in the version date below. Cal-Royal Product reserves the right to, and may, on occassions, make changes and/or improvements in designs and dimensions without prior notice.

CAL-ROYAL PRODUCTS, INC. USA
6605 Flotilla St.
City of Commerce
CA 90040 USA
Tel: (323) 888-6601
FAX: (323) 888-6699
Website: cal-royal.com
Email: sales@cal-royal.com

ITEM NO.:	DESCRIPTION:		SCALE:
WSNP-04	STAINLESS STEEL DOOR STOP WALL MOUNT		NOT TO SCALE
ANSI:	**UNIT:**	**VERSION:**	**BY:**
---	inches	ver.1 rev. 03/19	adg