


FINISH: MILL FINISH ALUMINUM

7/16" (11.1 mm) CARPET/SPECIAL PURPOSE THRESHOLD

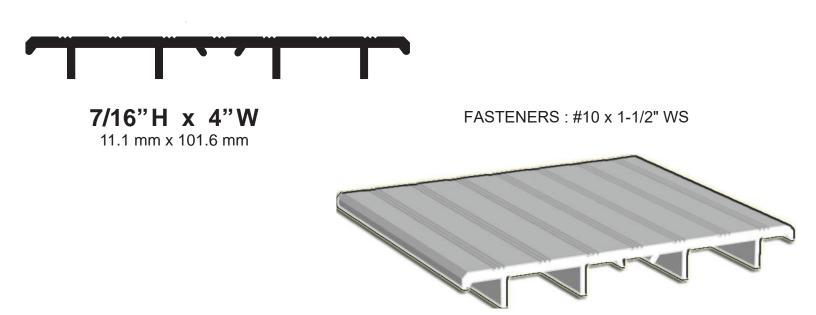

INSTALLATION INSTRUCTIONS

1. Measure width at the bottom of the frame and cut the threshold to exact full width of the opening.

- 2. If necessary trim and notch the threshold ends to accommodate the side jamb stops.
- 3. Mark and drill pilot holes through the pre-drilled holes in the threshold and fasten with screws provided.
- 4. Seal both ends and along the sides of the threshold.

5. Operate the door multiple times to ensure proper adjustment so as not to prevent the door from self-closing and latching.







MATERIAL FOR USE IN LISTED STEEL FRAMES AND CLASSIFIED HOLLOW METAL STEEL COMPOSITE TYPE FIRE DOORS ARE RATED UP TO AND INCLUDING 3 HOURS, WOOD COMPOSITE TYPE FIRE DOORS ARE RATED UP TO AND INCLUDING 1-1/2 HOURS, AND WOOD CORE FIRE DOORS ARE RATED 20 MINUTES WITHOUT HOSE STREAM.