

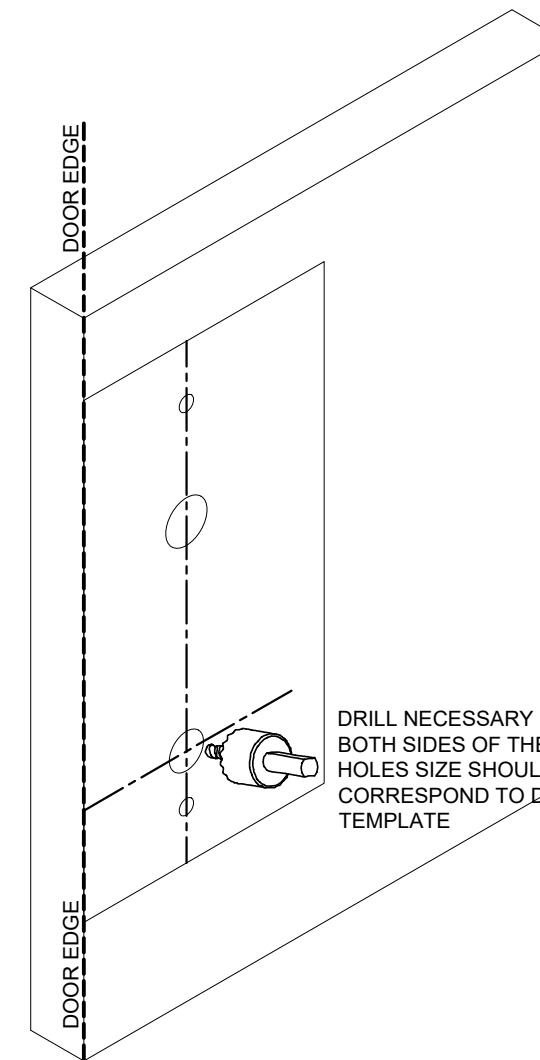


# EXCR929M

SMART DIGIT EXIT DEVICE TRIM RESIDENTIAL / COMMERCIAL,  
ANSI GRADE 2 CLUTCH MECHANISM

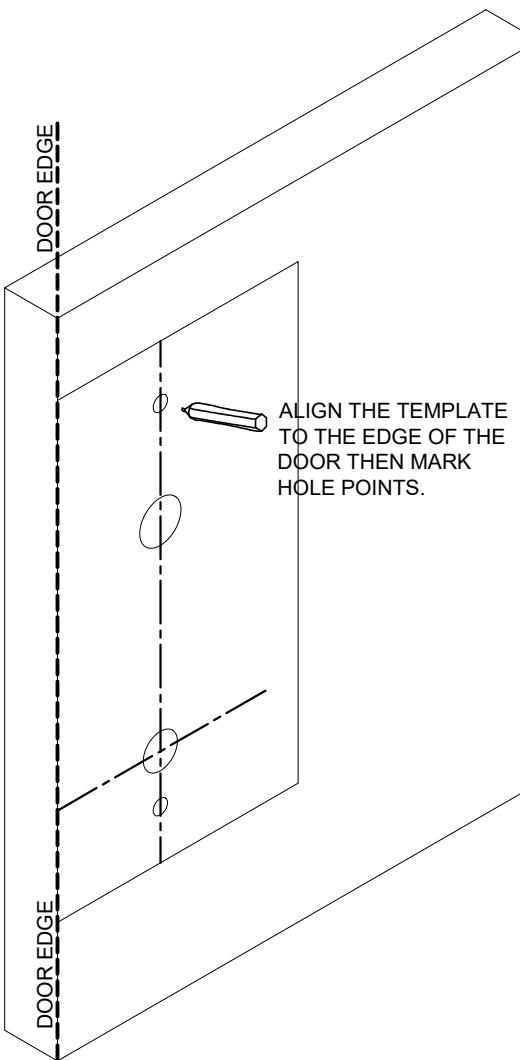

## DOOR PREPARATION

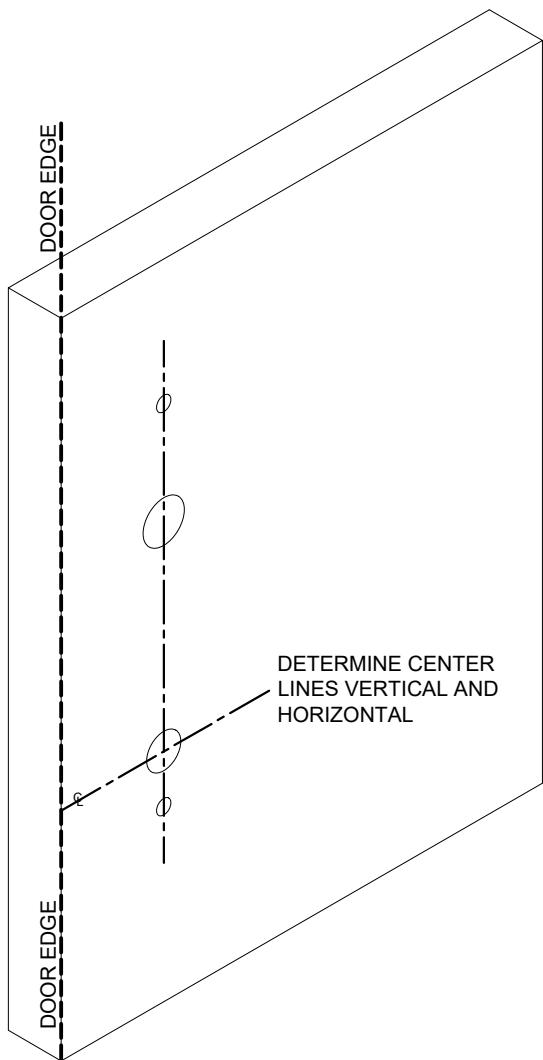

# EXCR929M

# SMART DIGIT EXIT DEVICE TRIM RESIDENTIAL / COMMERCIAL, ANSI GRADE 2 CLUTCH MECHANISM

INSIDE OF DOOR  
(PANIC BAR SIDE)

10. SCREW IN PLACE BATTERY PACK COVER.(4X AAA BATTERY)

9. CONNECT POWER SUPPLY CABLE TO THE TRIM.  
INSERT BATTERIES TO POWER UP THE DEVICE.

8. SECURE BATTERY PACK MOUNT  
TO THE DOOR SURFACE.

7. USING THE TEMPLATE PROVIDED,FASTEN THE  
PANIC BAR IN PLACE.  
*(HOLE PREP MUST BE BASED ON PANIC BAR  
TEMPLATE)*

6. COUNTER SINK THE SCREW HEADS TO  
FLUSH WITH THE DOOR SURFACE.

5. INSERT THE SPRING ON THE SPINDLE.

6. COUNTER SINK THE SCREW HEADS TO  
FLUSH WITH THE DOOR SURFACE.

OUTSIDE OF DOOR  
(TRIM SIDE)

4. PLACE THE RUBBER GASKET BEFORE INSTALLING  
THE TRIM ON THE DOOR. FOLLOW THE ARROW INDICATOR  
ON THE TRIM GASKET / RUBBER SEAL.

3. MAKE SURE TO PASS THRU THE  
QUICK CONNECT POWER CABLES  
BEFORE SECURING THE FRONT  
LOCKSET TRIM.

2. ITS IMPORTANT TO KEEP THE ARROW  
INDICATOR POINTING UP AS YOU INSERT  
THE SPINDLE.



1. INSTALL THE LEVER TO THE TRIM,  
MAKE SURE TO INCLUDE THE RING  
BEFORE SECURING IT IN PLACE WITH  
THE TORQUE SCREW PROVIDED.

USB-C TEMPORARY POWER  
IN-CASE BATTERY PACK DIES.

## INSTALLATION INSTRUCTION



DWG NO.  
EDG-0000-06/25-1of1