



FLR2298 KIT INSTALLATION INSTRUCTION

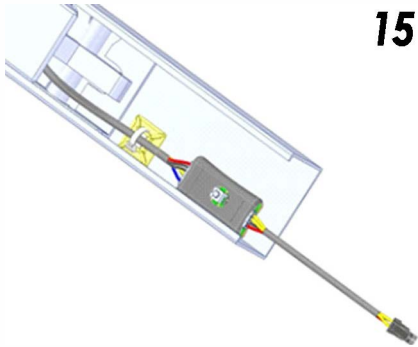


15

Stick the tie wire mount and use the cable tie to fix cable in place.

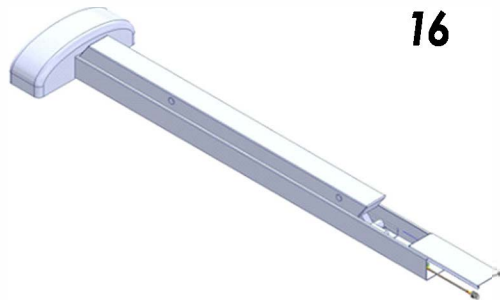


16

Slide shim cover back into place.

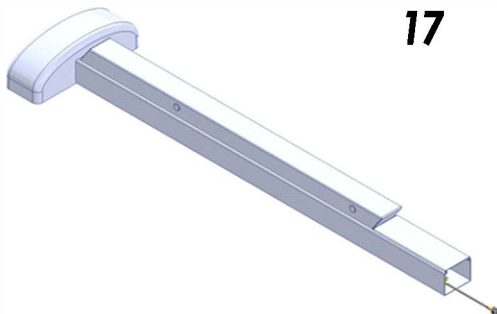


17

Assembly Completed.

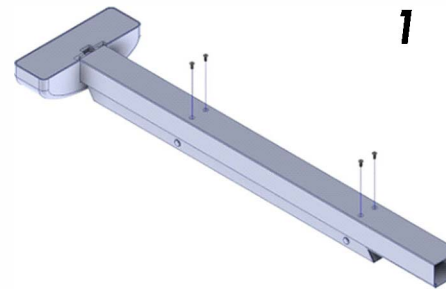


1

Flip over the device and remove fixed screws.

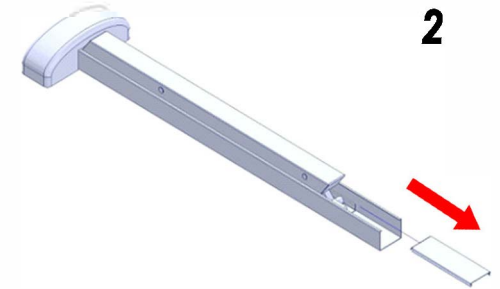


2

Flip over and remove the sliding shim cover.

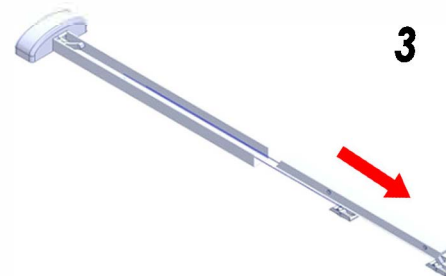


3

Remove the Push Roll assembly.

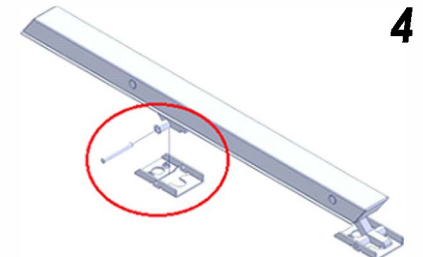


4

Remove the roll pin and separate the Push Roll from the Mount Base.

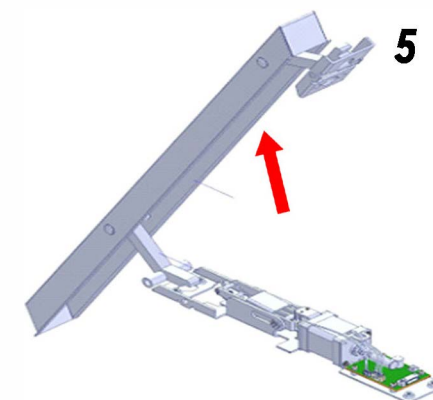


5

Lift the Push Roll in order to connect the ELR Kit.

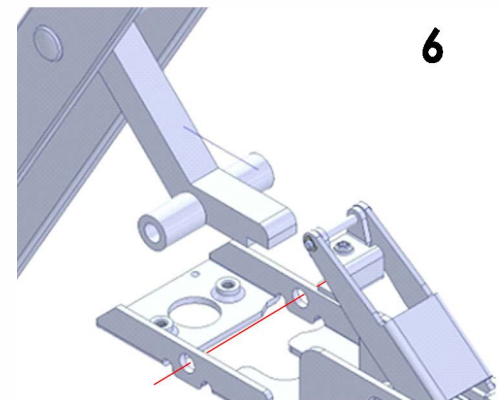


6

Prepare to connect the ELR Kit.

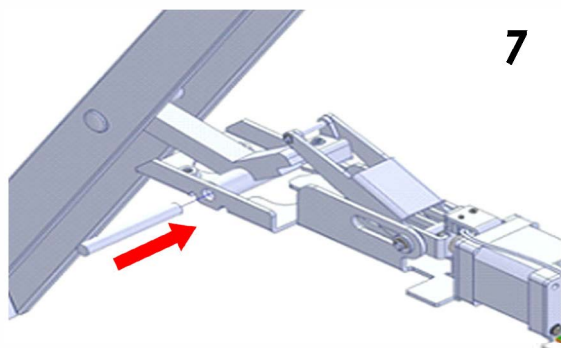


7

Insert the Roll Pin through the holes to secure.

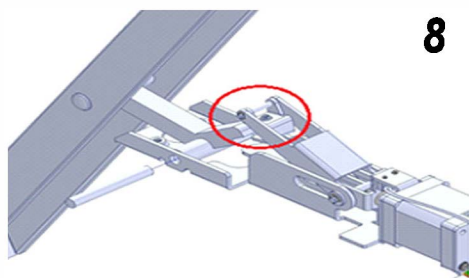


8

Connect the ELR Kit and the Push Rail.

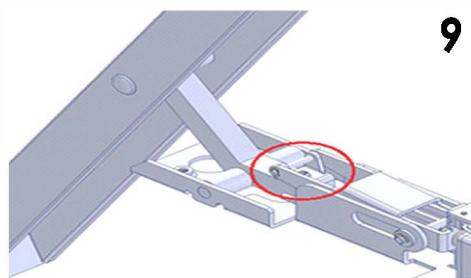


9

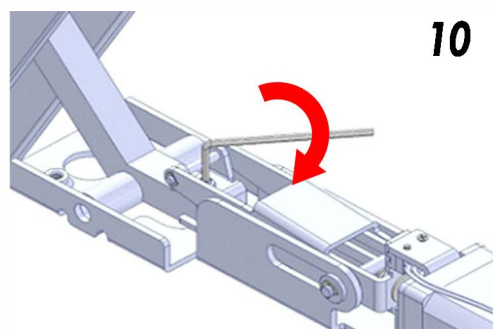


10

Fasten the stop screw in place using a Hex wrench.

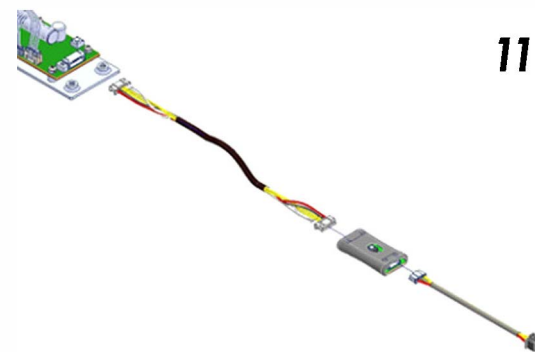


11

Connect the Extended Board.

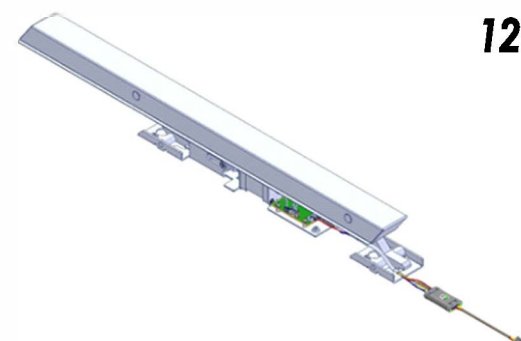


12

Lay down the assembly unit and prepare to re-install.

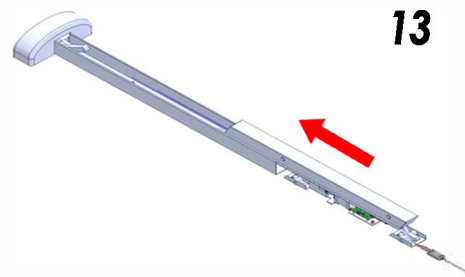

13

Slide the assembly unit back to the Mount Base

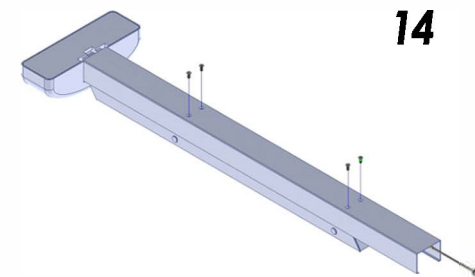

14

Flip back over the assembly unit and re-fasten fixed screws.