




1. A. Mark door with template at desired height.  
B. Cut out notch.

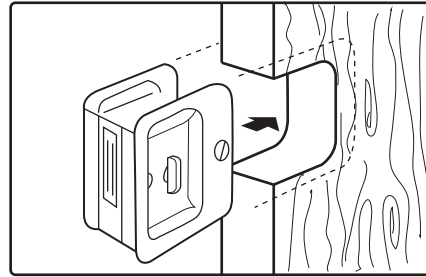


2. A. Slip lock into notch and position correctly.

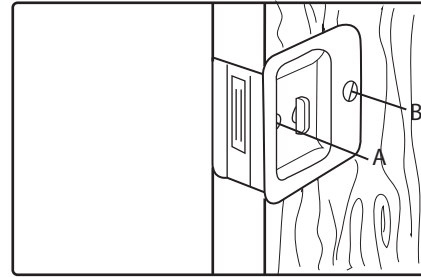


3. A. Tighten machine screws (A) on both side of door.  
B. Install wood screws (B) on both sides of door.

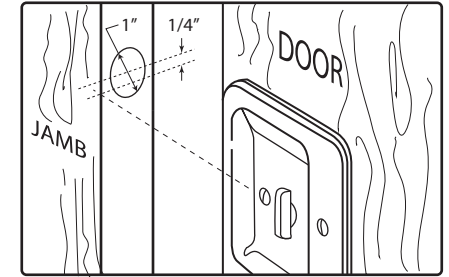


4. A. Mark horizontal center line on jamb opposite center line of lock.  
B. Locate and mark vertical center line.  
C. Mark point on vertical center line 1/4" (6mm) above horizontal center line.  
D. Bore 1" (25mm) diameter hole 1/2" (13mm) deep at this point.

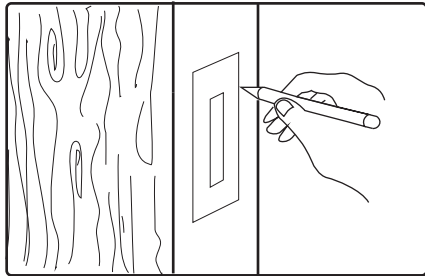


5. A. Place strike plate on door frame centered over 1" (25mm) hole drilled in step 4D.  
B. Outline the strike plate on the door jamb.

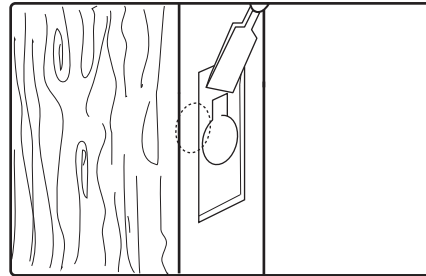

6. A. Mortise jamb for strike 1/32" deep.  
B. Cut slight notch at top of the 1" hole for clearance of latch arm.

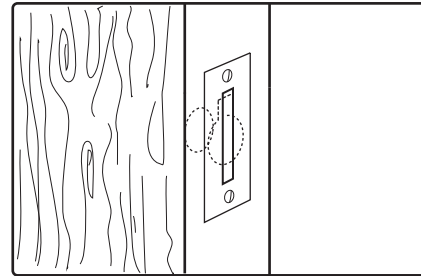

7. A. Install strike as shown.

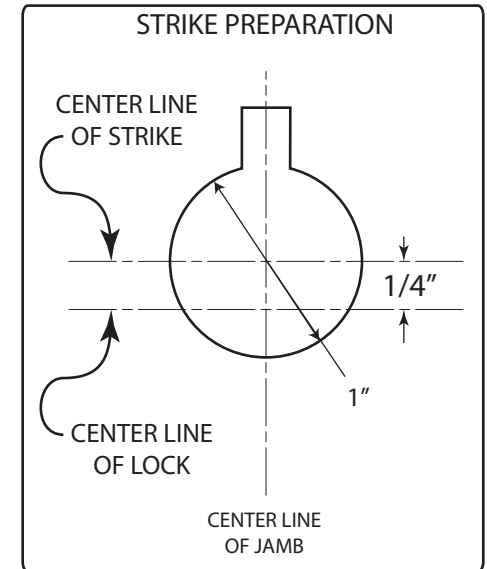

## INSTALLATION INSTRUCTIONS FOR PRIPDL-21 AND PASPDL-34



6605 Flotilla St.  
City of Commerce  
CA 90040 USA  
Tel: (323) 888-6601  
FAX: (323) 888-6699  
Website: cal-royal.com  
Email: sales@cal-royal.com

| ITEM NO.               | DESCRIPTION               | ANSI | SCALE       | UNIT           | VERSION             |
|------------------------|---------------------------|------|-------------|----------------|---------------------|
| PRIPDL-21<br>PASPDL-34 | INSTALLATION INSTRUCTIONS | ---  | 1 : 1       | inches<br>(mm) | ver. 1.0 rev. 01/12 |
|                        |                           |      | PAGE 1 OF 1 |                | BY:bteves/adg       |