




INSTALLATION GUIDE






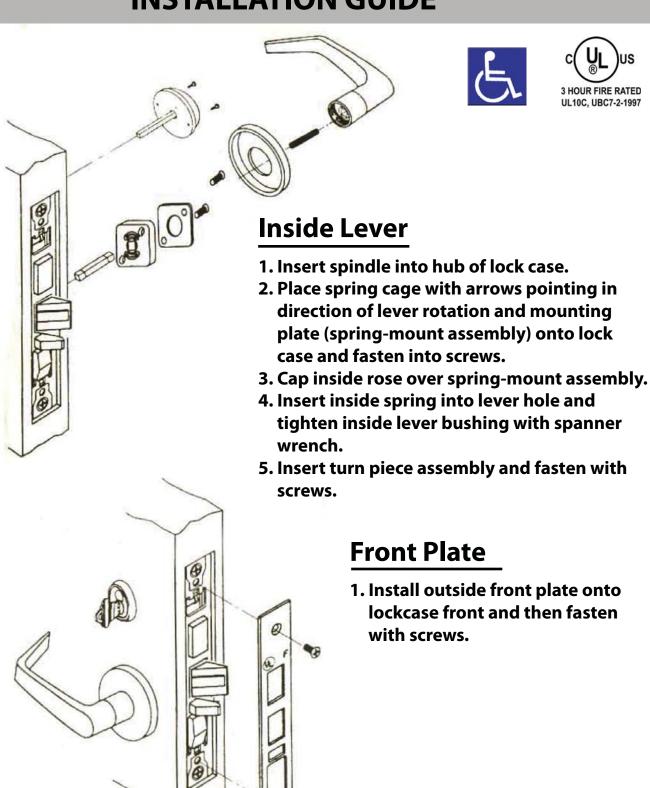

Door Preparation


- Align door preparation template on edge of door with applicable lines. Check door preparation chart and mark only holes for lock function being installed.
- 2. Mortise door edge according to measurements of installation template and drill proper holes for trims.

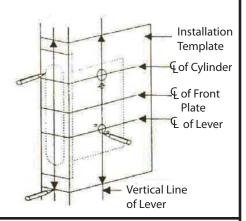


Strike preparation

1. Align strike template on jamb according to measurements of strike installation template.

Bore 1" diameter holes into door edge, 1 1/8" deep. Recess 5/32" for fit of strike and box.

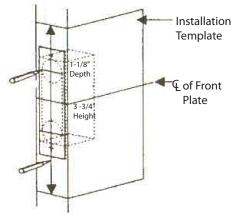


2. Mortise jamb according to measurement of installation template. Then fit strik and dust box into frame and secure into place with screws.

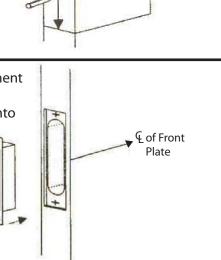

Lockcase Installation


 Insert lockcase into mortise cut-out & fasten screws to door.

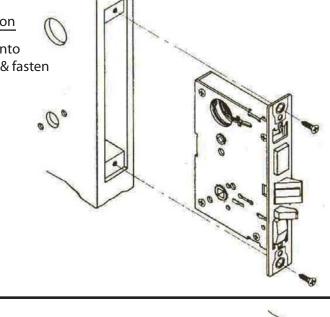

Outside lever


1. Place spring cage onto outside lever assembly with arrows pointing in direction of lever rotation. Insert spindle into hub of lock case.

2. Position outside lever assembly into post holes of lock case.

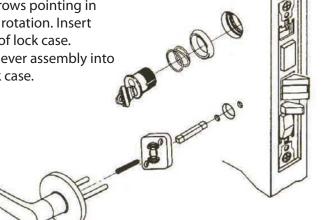



SECURITIES

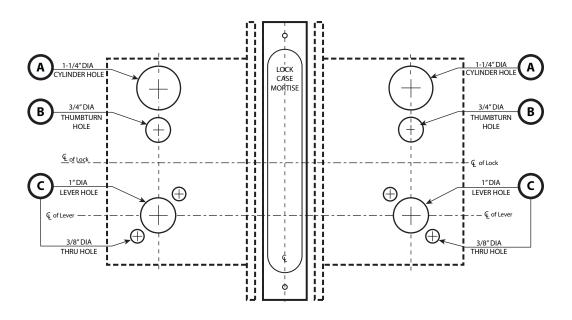

DOOR PREPARATION CHART						
	OUTSIDE			INSIDE		
SERIES	CYLINDER HOLE	THUMBTURN HOLE	LEVER HOLE	CYLINDER HOLE	THUMBTURN HOLE	LEVER HOLE
LOCK FUNCTION	A	В	c	A	В	C
NM8010			•			•
NM8040		•	•		•	•
NM8050	•		•			•
NM8056	•		•		•	•
NM8060	•		•	•		•
NM8070	•		•			•
NM8080	•		•			•
NM8170			•			
NM8453	•		•		•	•
NM8456	•		•		•	•
NM8466	•		•	•		•
NM8473	•		•		•	•
NM8485	•		•		•	•
M8460	•				•	
M8462	•			•		
M8463	•			•		
M8464	•					
M8465	•		•			•





STRIKE TEMPLATE

