
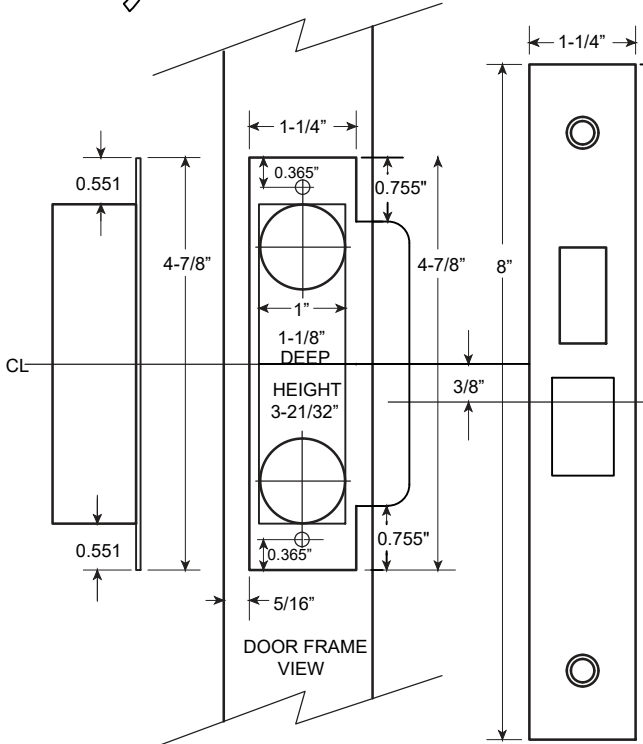



MORTISE LOCK  
INSTALLATION TEMPLATE

⌀ of Lock (top view)

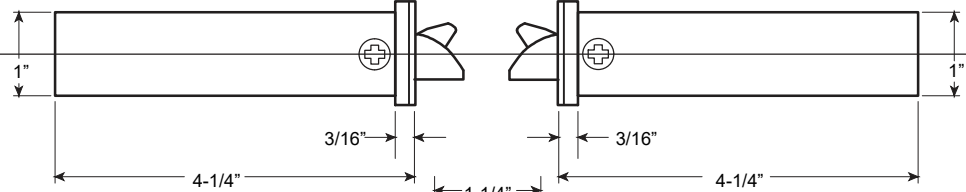

DOOR FRAME  
VIEW

DRILL (2) 7/16" HOLE  
IF USED WITH  
ESCUTCHEON TRIM

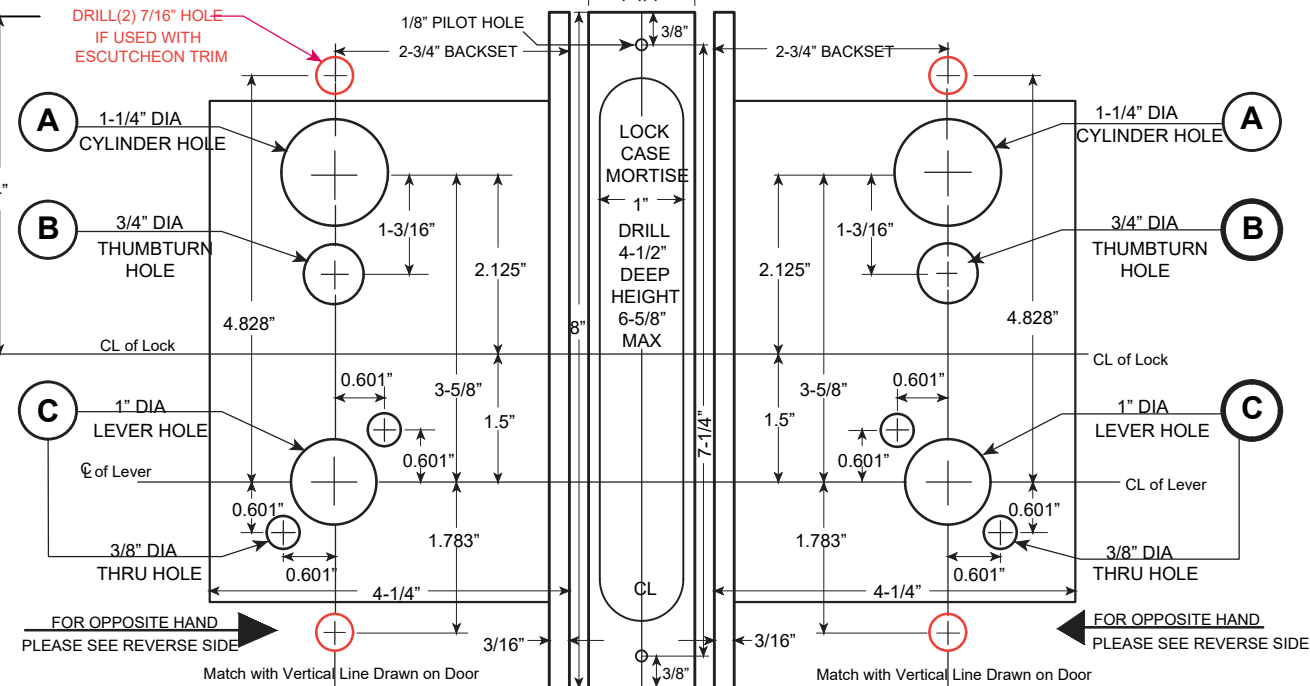

FOR OPPOSITE HAND  
PLEASE SEE REVERSE SIDE

FOR OPPOSITE HAND  
PLEASE SEE REVERSE SIDE


Match with Vertical Line Drawn on Door

Match with Vertical Line Drawn on Door


**DOOR PREPARATION CHART**

ITEM NO.	OUTSIDE			INSIDE		
	CYLINDER HOLE (A)	THUMBTURN HOLE (B)	LEVER HOLE (C)	CYLINDER HOLE (A)	THUMBTURN HOLE (B)	LEVER HOLE (C)
<b>NM8445</b>		●	●		●	●

● Indicates positions that needs to be drilled.

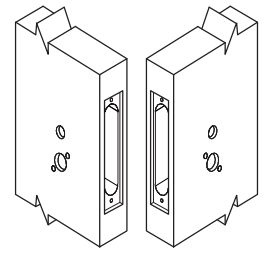

OUTSIDE  
LEFT HANDED DOORS

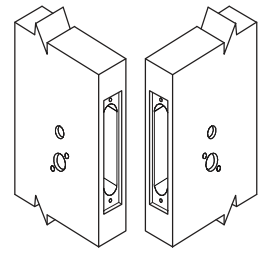

INSIDE  
RIGHT HANDED DOORS

