




Weather Seal Door Accessories

INT-880 Adhesive Gasketing Tool with Intumescent

INT-880 Adhesive Gasketing Seal around the door

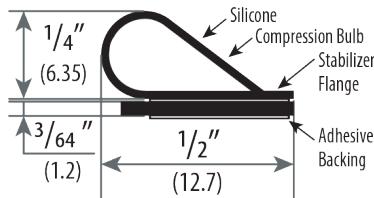


ITEM INFO:

INT-880

(C-880 w/ INT-001 COMBO)

Length: **36" x 84",
48" x 96",
96" x 96"**

Available Finishes:
B (Black), **W** (White)

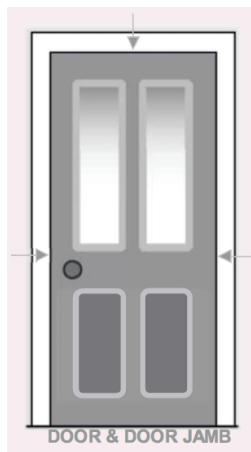

Seal gap between door and door jamb. Apply to Top part and both sides of the door jamb.

TESTING / RATINGS:



GASKETING MATERIAL FOR FIRE DOORS INTENDED FOR APPLICATION TO
UL LISTED STEEL FRAMES AND/OR CLASSIFIED STEEL COVERED COMPOSITE TYPE,
AND HOLLOW METAL TYPE FIRE DOORS RATED UP TO 3HRS;
WOOD AND PLASTIC COVERED COMPOSITE TYPE FIRE DOORS RATED UP TO 1-1/2 HRS;
AND WOOD CORE TYPE FIRE DOORS RATED UP TO 20 MINUTES.

43ZY

Installation Guidelines Continued:

Installation Procedure:

1. Measure the exact length of the hinge jamb, strike jamb, and header jamb before cutting the seal.
2. Cut both ends of the upper corner of the gasket at 45° angle.
3. Peel off roughly 18" of backing from the adhesive gasket strip. Be careful not to touch the adhesive or drag it on the ground.
4. Place the adhesive gasket as illustrated below. DO NOT STRETCH MATERIAL. The use of a hand roller is highly recommended.
5. Remove the next 18" of paper backing and repeat step #3 until the entire length of the seal is installed. If a pre-cut length overruns a top or side, stretching has occurred. Remove it immediately and reapply.
6. Once installed, apply firm pressure along the entire surface of the product to ensure proper adhesion to the frame.
7. Check if the gasket is properly mounted around the perimeter of the door, thus prevents the foreign particles from coming inside and also helps to save energy from the HVAC system.

