


LH TEMPLATE FOR RS-2000

NOTE: All shaded drill holes are not required if a 161 prep is already existing on the door *

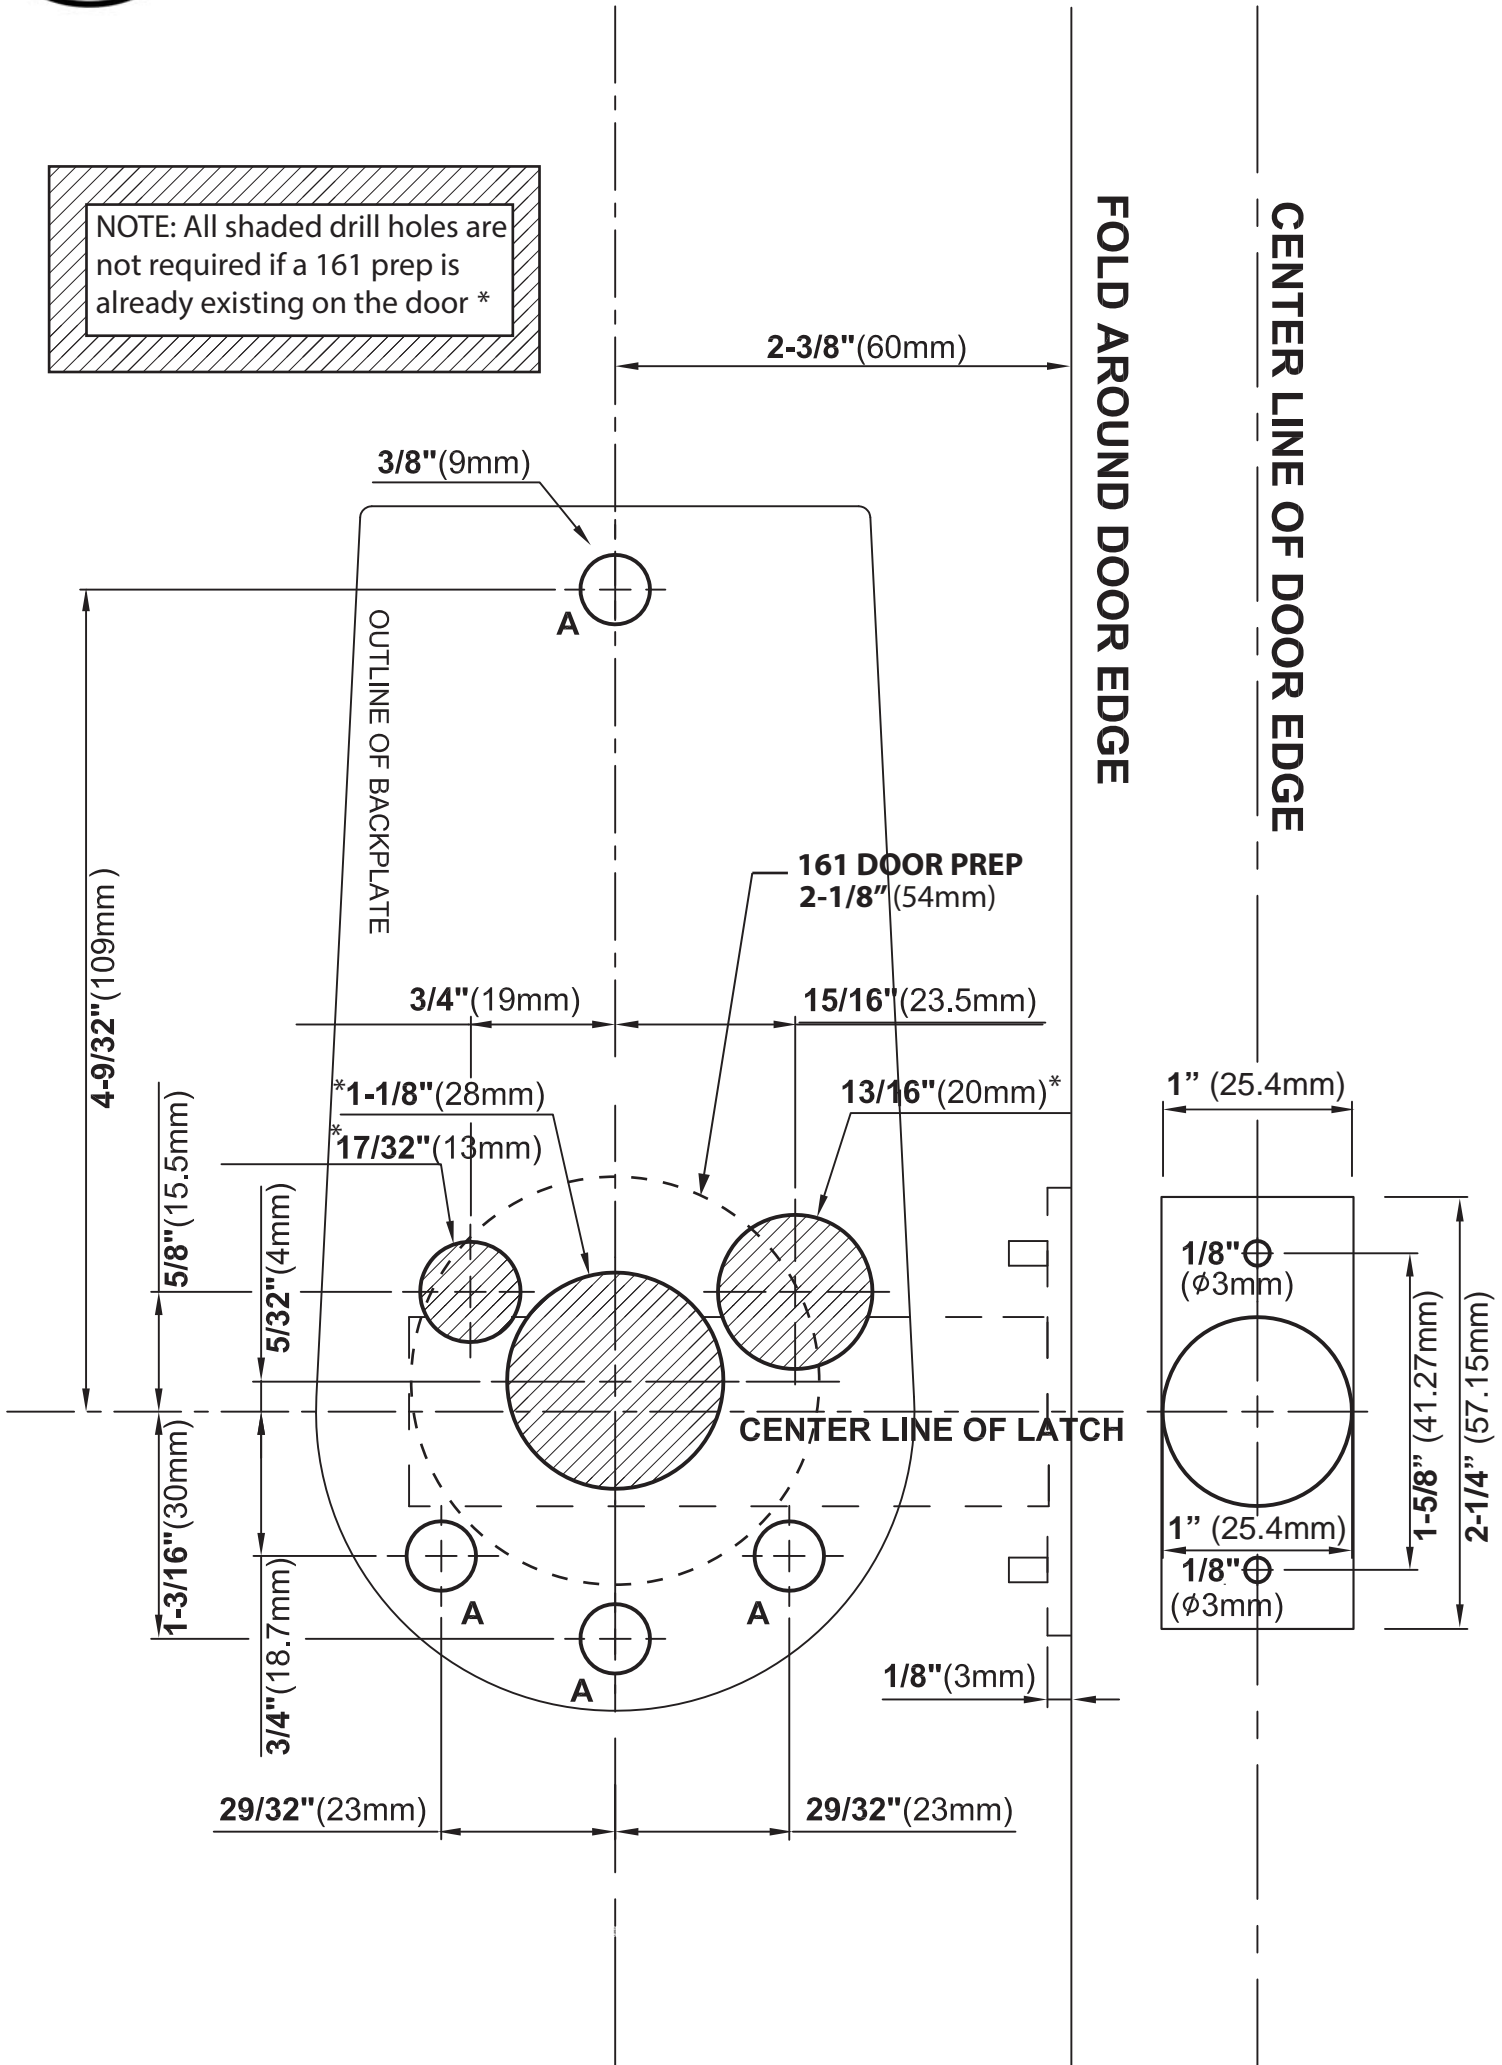

RH TEMPLATE FOR RS-2000

