


TEMPLATE FOR GLSRIM9800 TRIM



IMPORTANT :

ATTACH STRIKE TO FRAME OR MULLION BEFORE POSITIONING TEMPLATE ON DOOR, LOCATE TEMPLATE FROM SURFACE OF STRIKE.

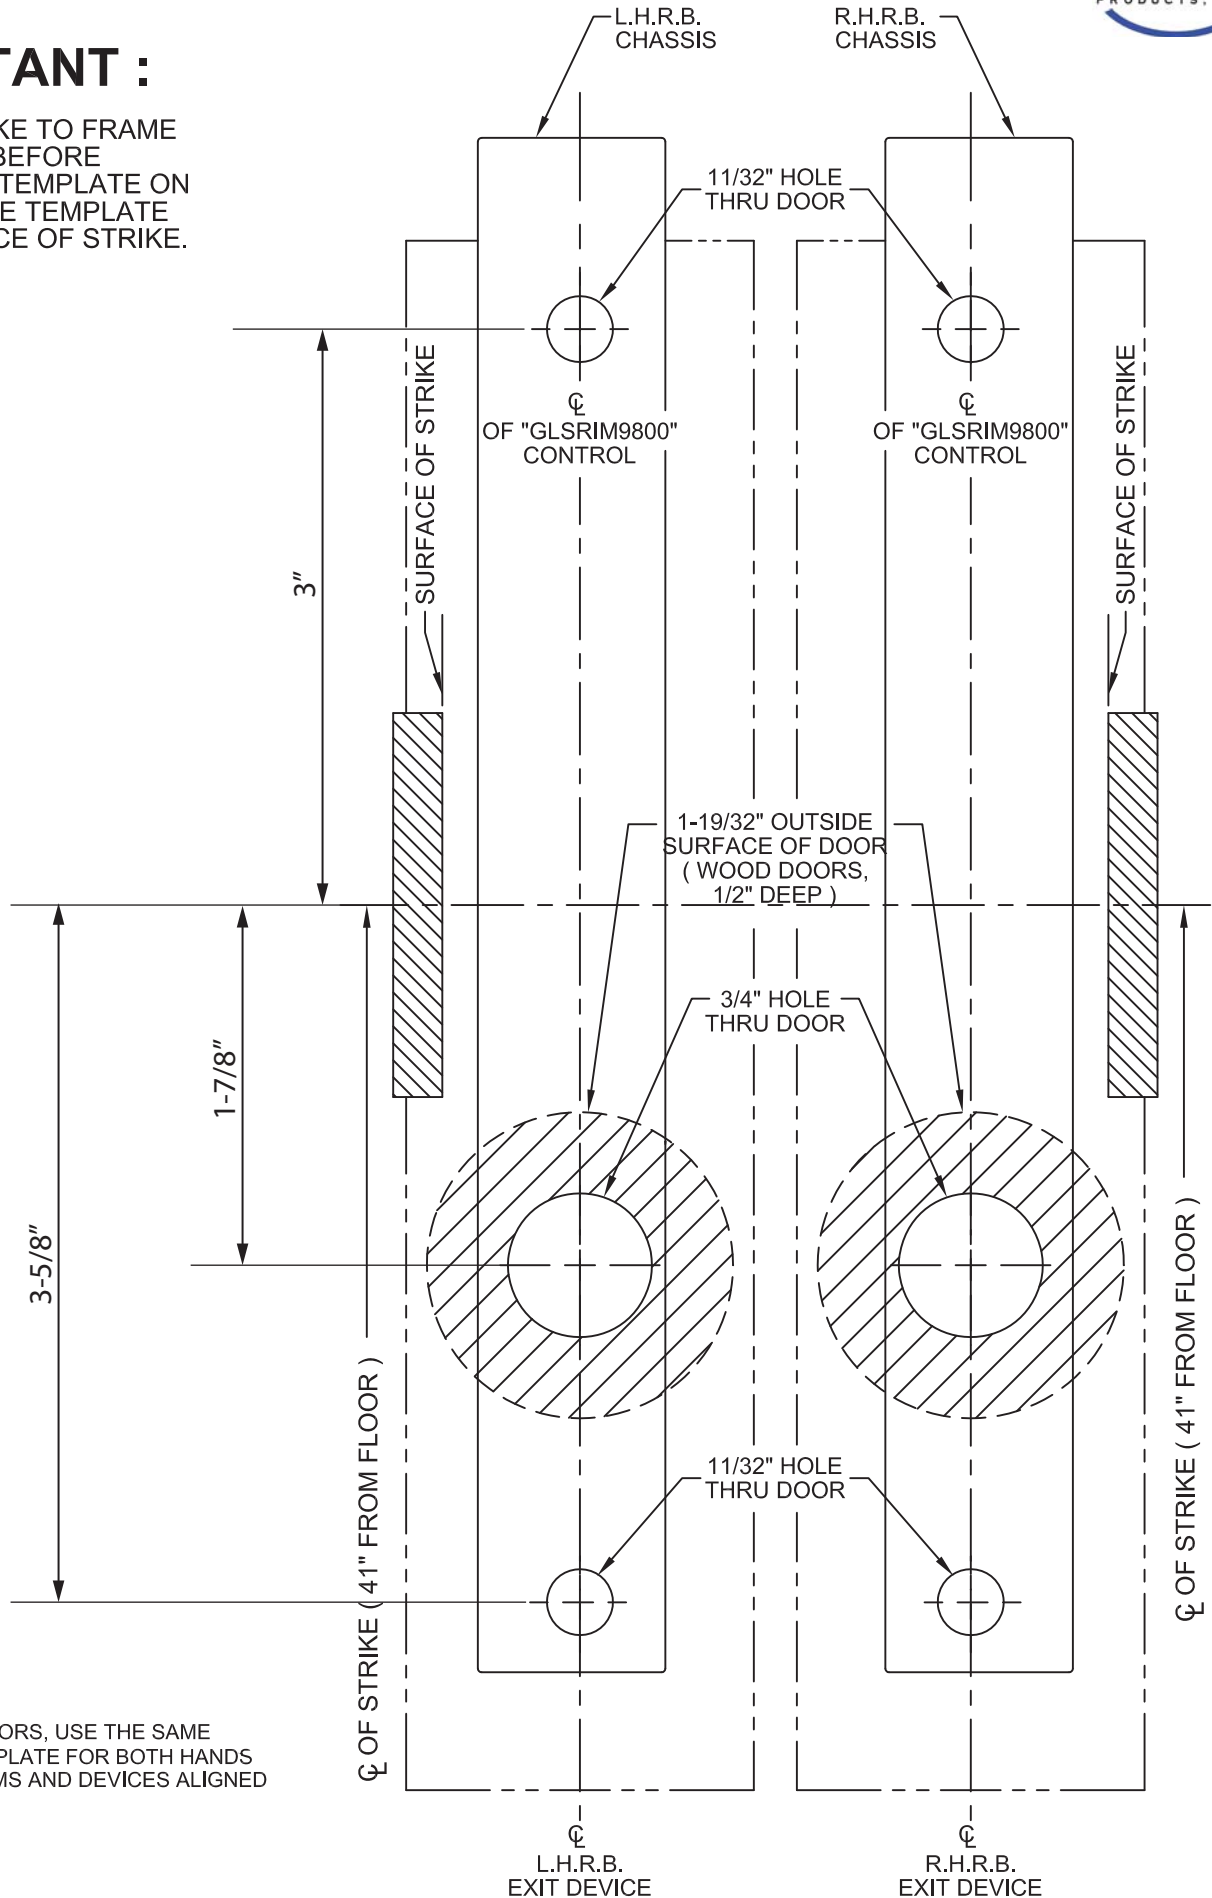

NOTE :
FOR PAIRS OF DOORS, USE THE SAME SIDE OF THE TEMPLATE FOR BOTH HANDS TO KEEP THE TRIMS AND DEVICES ALIGNED