
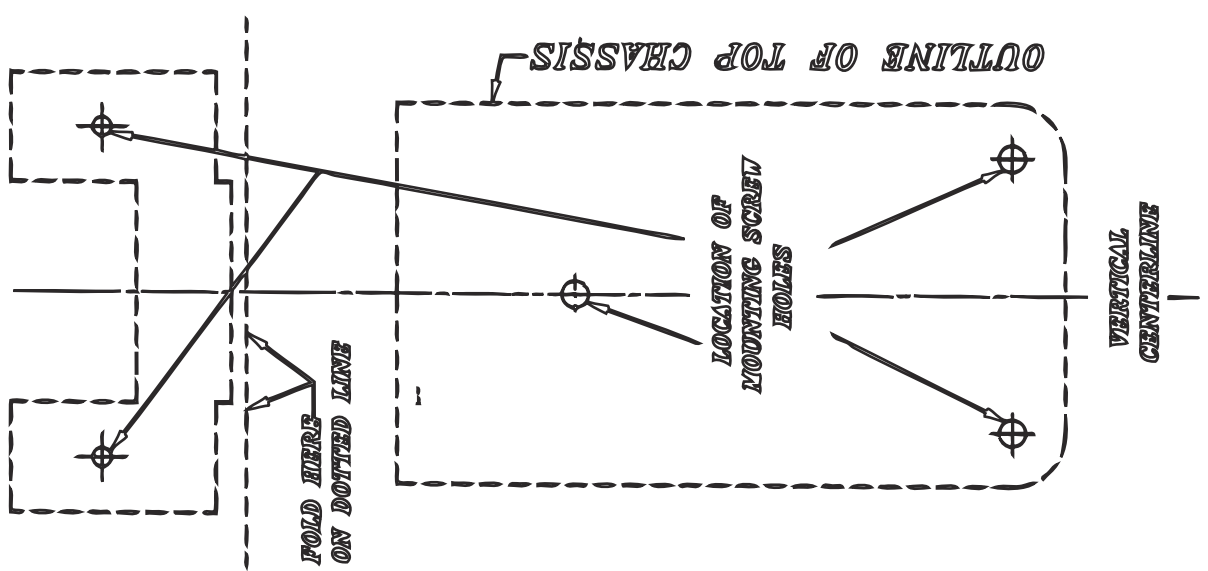


9860 TEMPLATE FOR TOP AND BOTTOM CHASSIS ASSEMBLY

THIS TEMPLATE NOT TO BE USED FOR MONITOR STRIKE PREP DOOR USING INSTRUCTIONS PACKED WITH MONITOR STRIKE

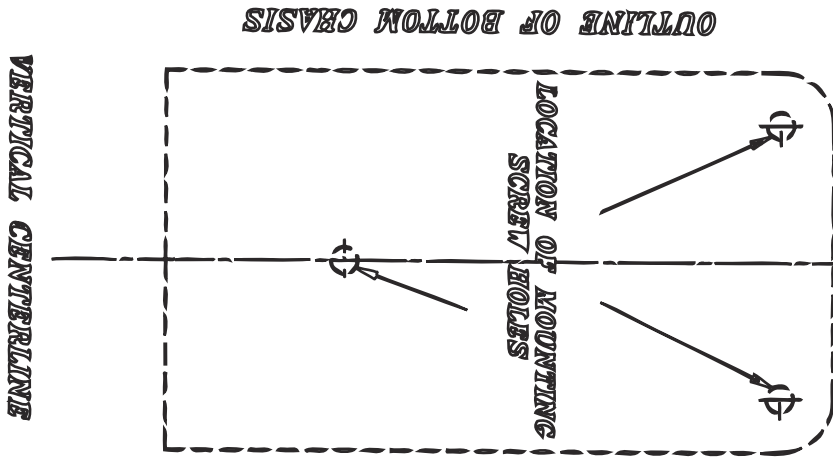

THIS TEMPLATE NOT TO BE USED FOR BB1 MONITOR STRIKE. PREPARE DOOR USING INSTRUCTIONS PACKED WITH MONITOR STRIKE