




TEMPLATE FOR GLSRIM9800

IMPORTANT: ATTACH STRIKE TO FRAME OR MULLION BEFORE POSITIONING TEMPLATE ON DOOR, LOCATE TEMPLATE FROM SURFACE OF STRIKE.

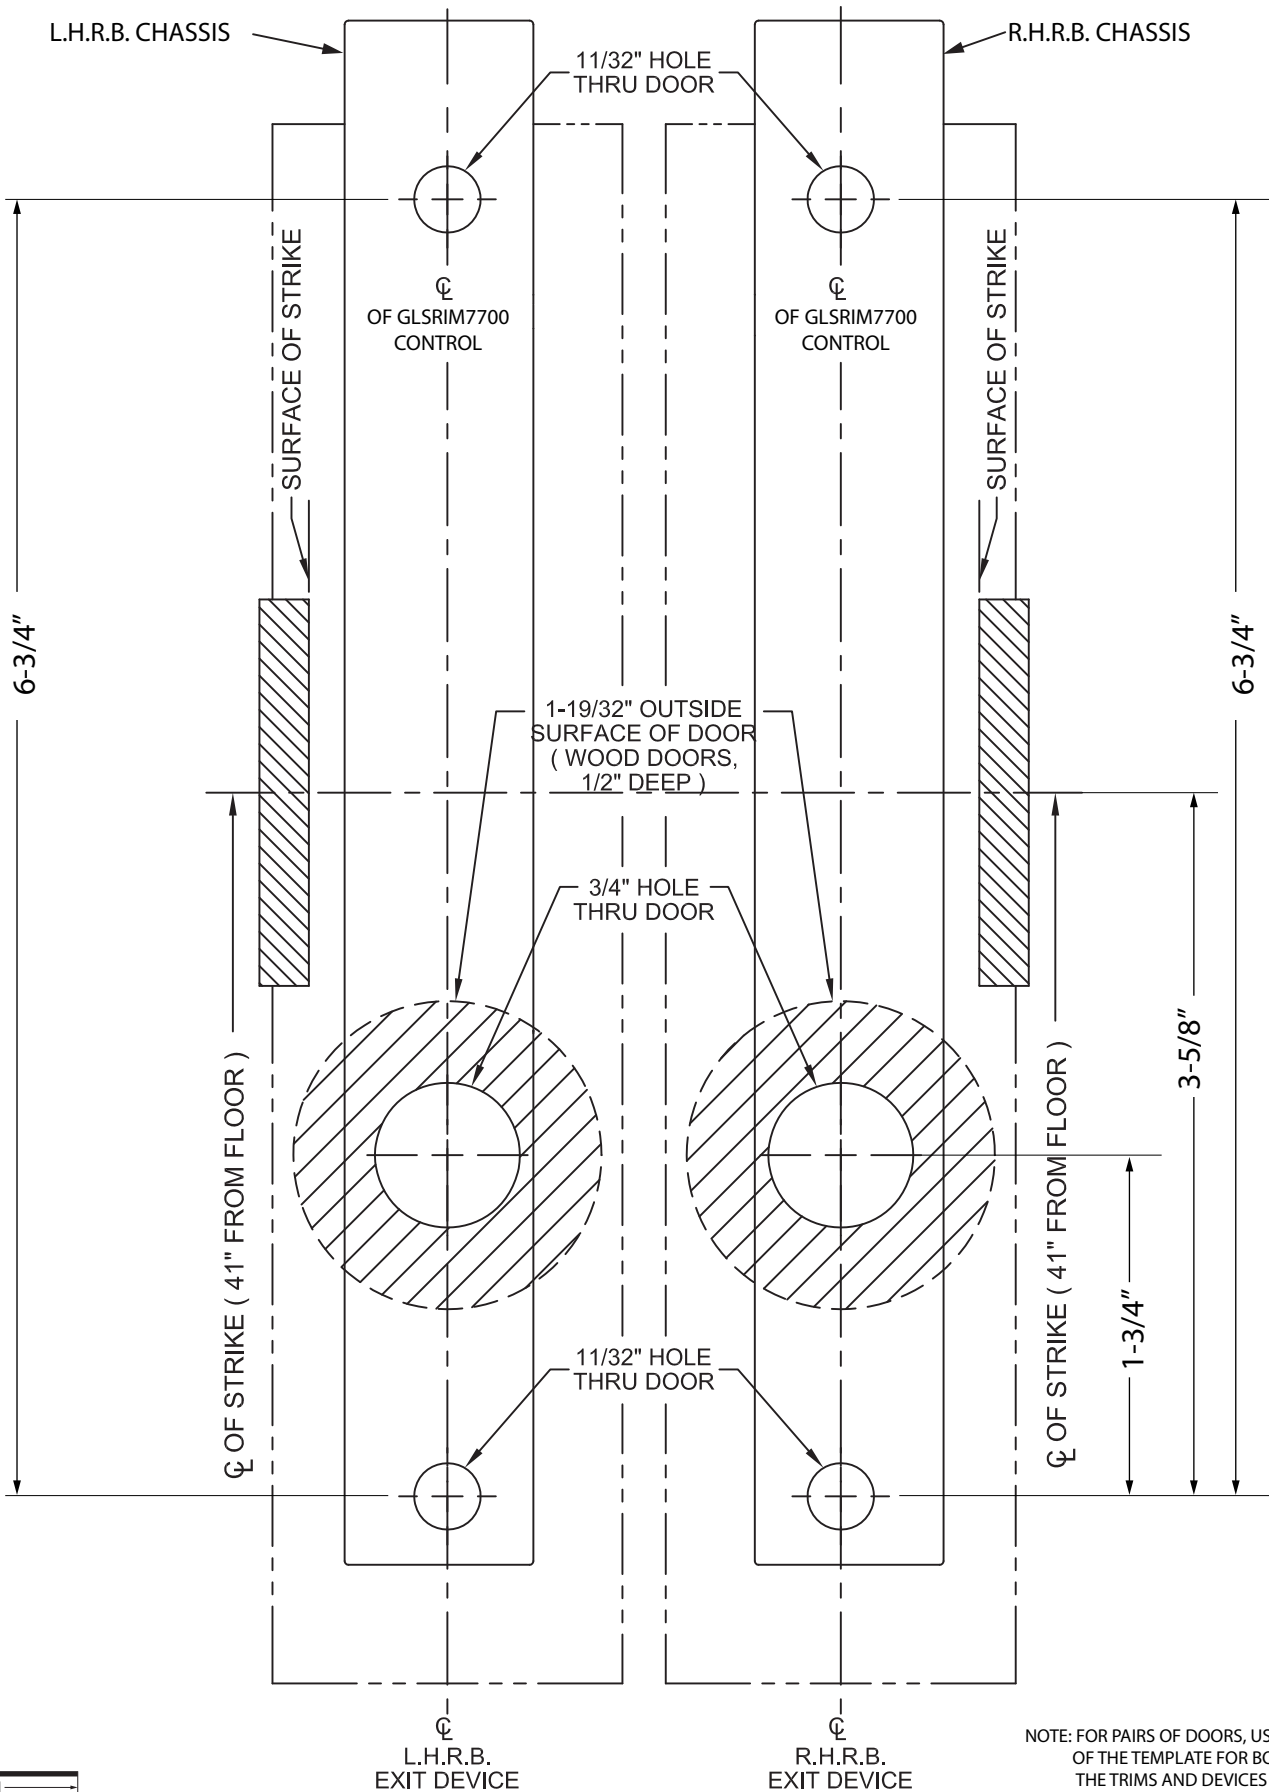

1 INCH
IF PRINTED TO SIZE

NOTE: FOR PAIRS OF DOORS, USE THE SAME SIDE OF THE TEMPLATE FOR BOTH HANDS TO KEEP THE TRIMS AND DEVICES ALIGNED.