


OPENING	A	
	INCHES	MM
TO 100°	7-1/2"	191
100° TO 130°	8"	152
OVER 130°	4-1/2"	114

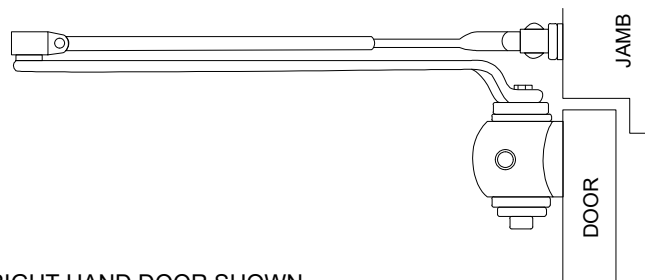

- RIGHT HAND DOOR SHOWN
 - SAME DIMENSIONS APPLY FOR LEFT HAND DOOR
 MEASURED FROM CENTERLINE OR PIVOT POINT
 - DIMENSIONS ARE IN: INCHES (")
 MILLIMETER (mm)

Preparation for Fasteners		
Fasteners	Door or frame	Drill-Sizes
Self Drilling/Tapping Machine Screw	Hollow Metal or Aluminum	No drill required
	Wood (see note)	3/16" pilot hole
1/4"-20 Machine Screw	Hollow Metal	Drill # 7 (0.201" dia.) & Tap 1/4"-20
Self Drilling/Tapping Machine Screw	Hollow Metal or Aluminum	9/32" drill closer side & 3/8" drill opposite side
	Wood Screw	
Wood Screw	Wood	3/16" pilot hole

NOTE: Wood doors/frames must have a pilot hole drilled when using Self Drilling/Tapping screws.

The illustration and technical description in this cut sheet is current as of the date in version date on the right. Cal-Royal Product reserves the right to, and may, on occasions, make changes and/or improvements in designs and dimensions without prior notice.



6605 Flotilla Street
 City of Commerce
 CA 90040 USA
 Tel:# (323) 888-6601
 FAX # (323) 888-6699
 WEB SITE:
 CAL-ROYAL.COM
 Email: sales@cal-royal.com

ITEM NO.	DESCRIPTION :
CR801	CR801 DOOR CLOSER REGULAR ARM INSTALLATION TEMPLATE

NOT TO SCALE
 PAGE 1 OF 1

UNIT
 PRIMARY DIMENSION SHOWN IN INCHES,
 DIMENSIONS IN () ARE MM

Prepared By: BBT / ADG / CVL

DATE: 04/18/2022

DWG. NO. DCT1023
 REV - - -