


- 1. Trim door to fit opening, 11/16" (17mm) less than height, 1/4" (6mm) less than width.
- 2. Round off hinge stile of door to 1-1/2" (38mm) radius.
- 3. Cut mortise for hinge full thickness of door as shown.
- 4. Center spring on door and screw it in place, attaching end plate with it.
- 5. Install top pivot to head jamb and top socket to door as shown.
- 6. Tilt door to engage pivots, align door, wedge in place and screw floor plate to floor. (Sloted holes in plate permit adjustments).
- 7. Slip tab end of side cover under end plate and screw side cover to door.

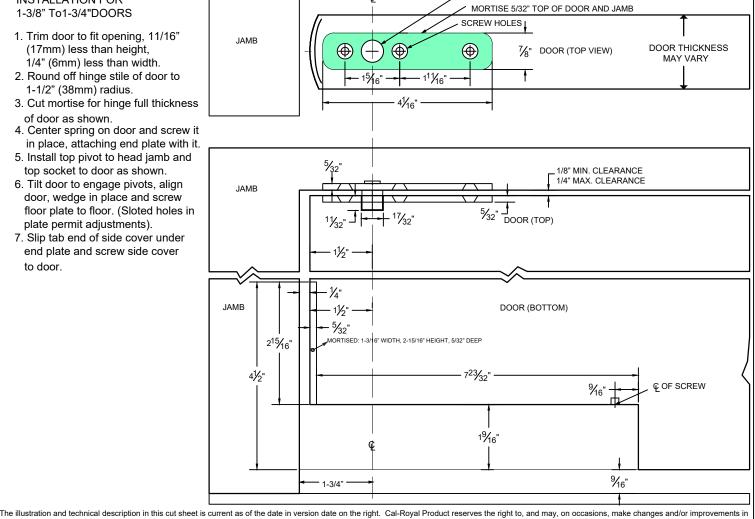

designs and dimensions without prior notice.



6605 Flotilla Street City of Commerce CA 90040 USA Tel.# (323) 888-6601 FAX # (323) 888-6699 WEB SITE: CAL-ROYAL.COM

DAFH8-Y

ITEM NO.

DESCRIPTION

TEMPLATE FOR DOUBLE ACTING FLOOR SPRING

NOT SCALE ARE MM PAGE 1 of 1

UNIT Prepared By: PRIMARY DIMENSION BHT-7000-01/24- 2of2 SHOWN IN INCHES, BBT / ADG / CVL 01/29/24 DIMENSIONS IN () Ver.