



INSTALLATION INSTRUCTION N-F77CVR CONCEALED VERTICAL ROD EXIT DEVICE

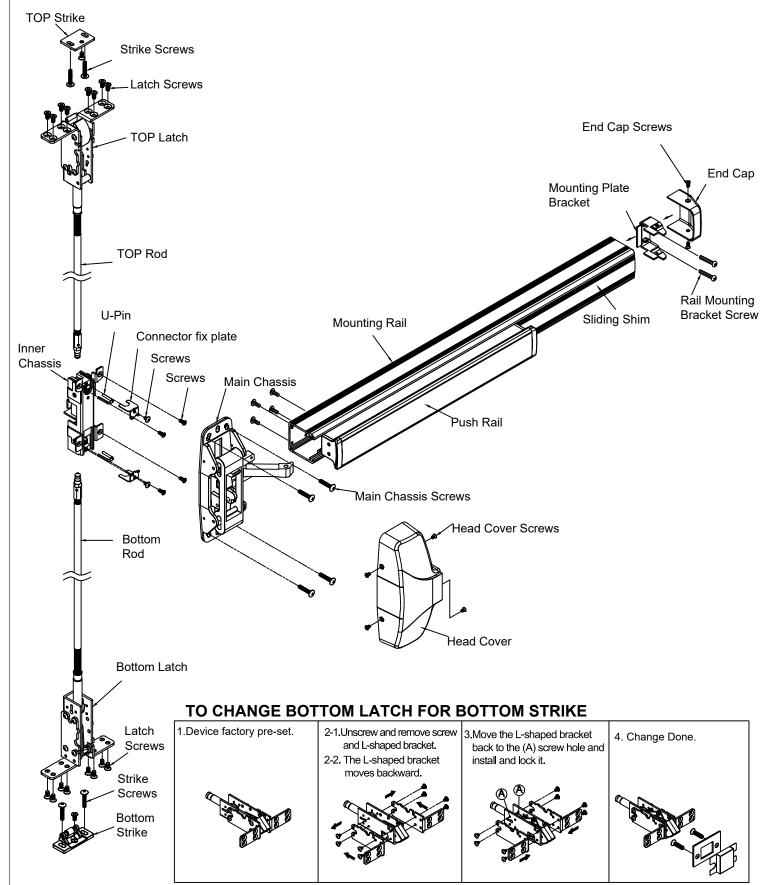


1.INSTALL INNER CHASSIS & TOP LATCH

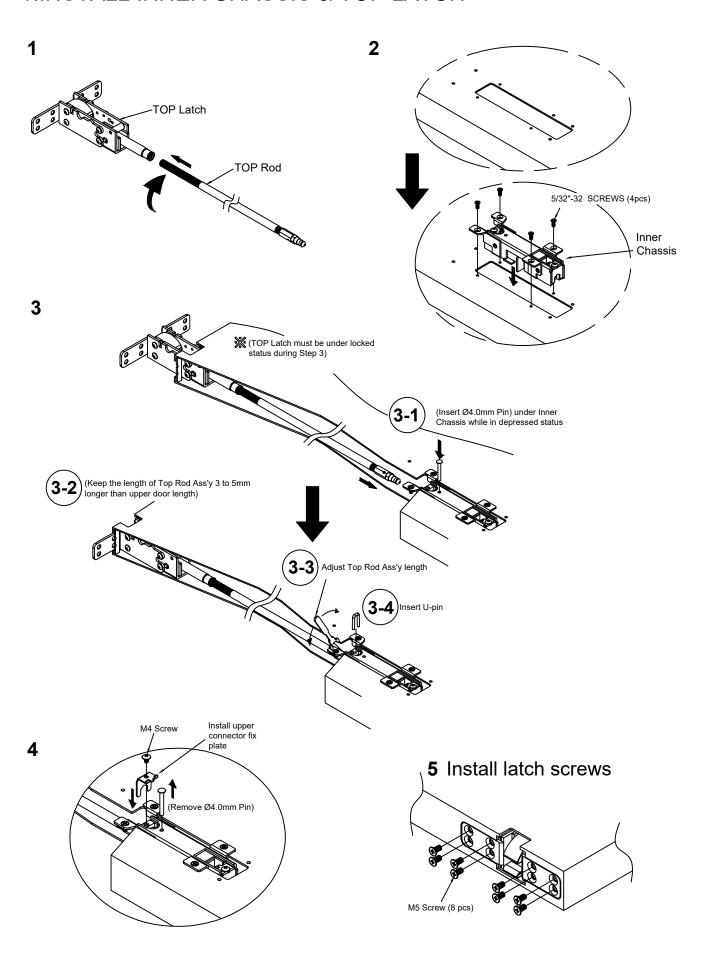

2.INSTALL BOTTOM LATCH (Skip this step if less Bottom Rod)


1 Attached Rod to Bottom latch

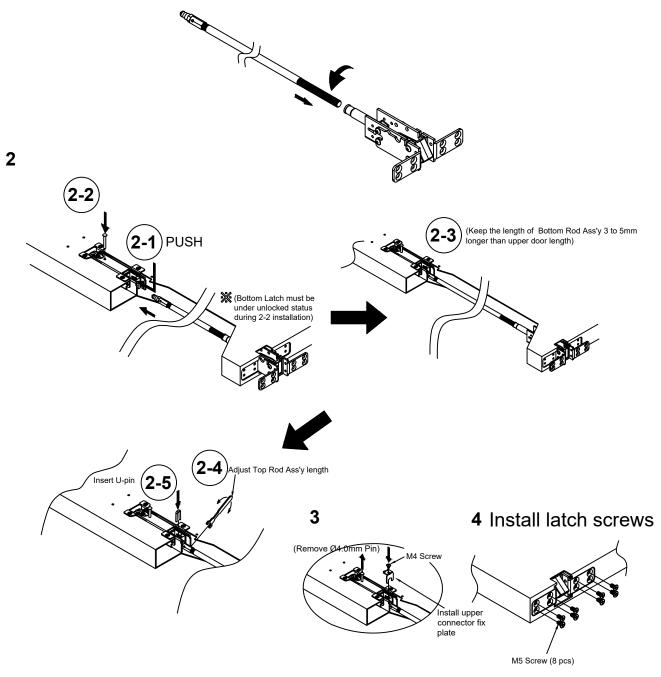


3.INSTALL TOP & BOTTOMSTRIKE (Please Follow TEMPLATE)

1 TOP Strike


2 Bottom Strike

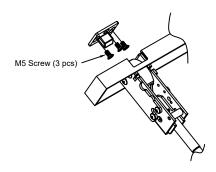

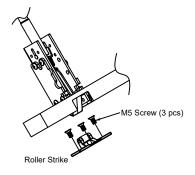


TO CHANGE HAND OF N-F77CVR EXIT DEVICE


1. LHR

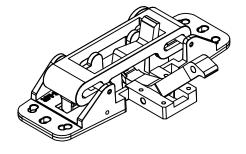


- 2-1. Remove chassis pin & main slide & tube.
- 2-2. Remove lift lever & lift lever pin.
- 2-3. Rotate 180° main slide & lift lever

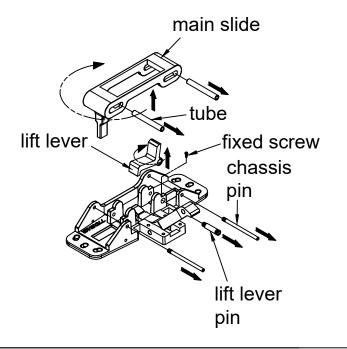

- 3-1. Reassemble lift lever at opposite side, as shown.
- 3-2. Replace main slide and chassis pin and lift lever pin. and fixed screw.

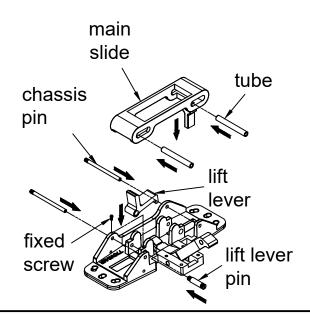

1. RHR Done.

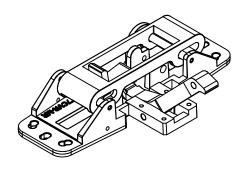

4-4